



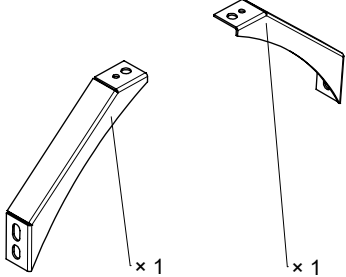


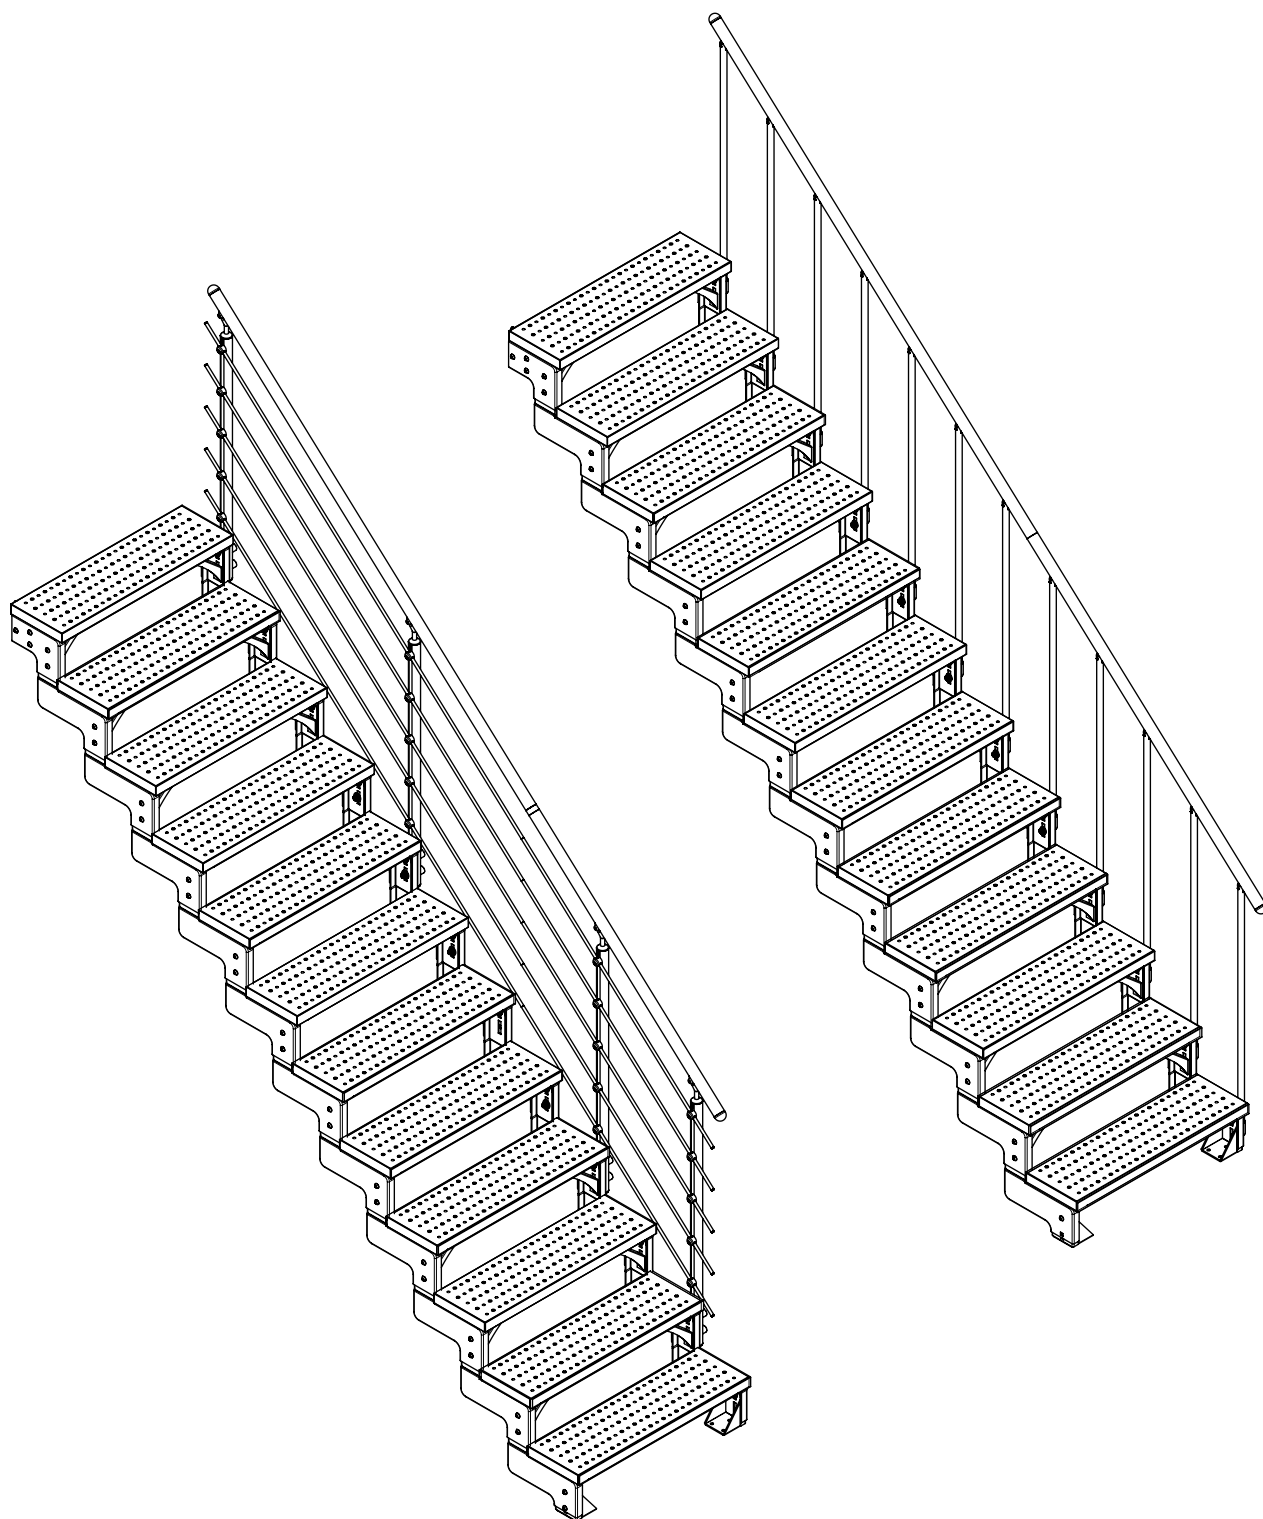









# GARDENTOP




## Metall gelocht





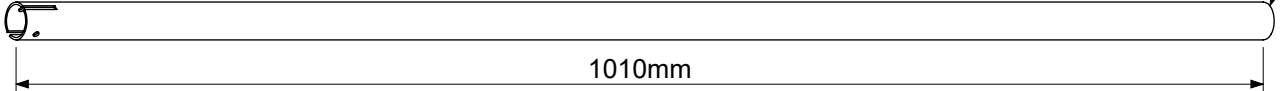





Montageanleitung  
Installation instruction

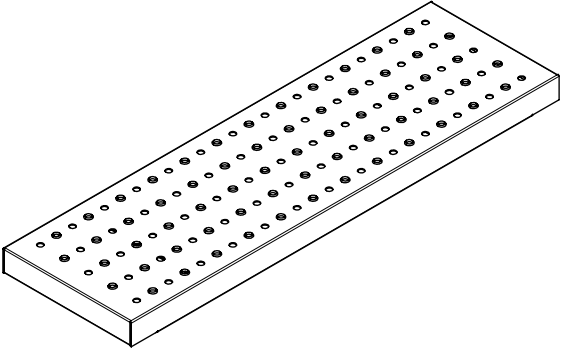
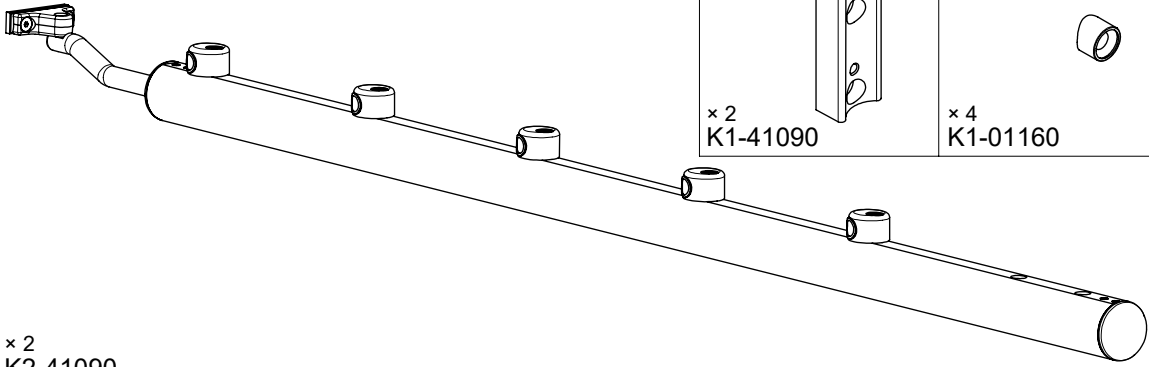






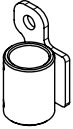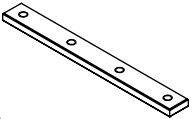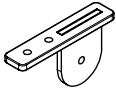


<b>1068015</b>		<b>Starter-Set Start kit</b>			
<p>1 2</p> <p>x 1 K1-41430      x 1 K1-41930</p>		<p>7 8</p> <p>x 1 K1-41911      x 1 K1-41910</p>		<p>5</p> <p>x 2 K2-41900</p>	
<p>6</p> <p>x 2 K1-41940</p>		<p>40</p> <p>x 14 K3-02045 M10x25</p>		<p>41</p> <p>x 2 K3-04110 Ø10</p>	
<p>42</p> <p>x 8 K3-04198 Ø10</p>		<p>43</p> <p>x 14 K3-03051 M10</p>		<p>44</p> <p>x 12 K3-08001 Ø12 x 60</p>	
<p>45</p> <p>x 12 K3-06070 Ø10 x 60</p>		<p>59</p> <p>x 12 K3-06269 Ø6 x 35</p>		<p>63</p> <p>x 4 K3-05022 M8 x 20</p>	
<p>64</p> <p>x 12 K3-04010 Ø10,5</p>					
<b>1068016</b>		<b>Ergänzungs-Set 1 step kit</b>			
<p>3 4</p> <p>x 1 K1-41921      x 1 K1-41920</p>		<p>40</p> <p>x 4 K3-02045 M10 x 25</p>		<p>42</p> <p>x 4 K3-04198 Ø10</p>	
		<p>43</p> <p>x 4 K3-03051 M10</p>		<p>59</p> <p>x 6 K3-06269 Ø6 x 35</p>	

<b>1068020</b>		<b>Stufen-Winkel</b> <b>Step support 1 step</b>			
 If more than 6 steps: Add (9) + (10)  Wenn mehr als 6 Stufen: (9) + (10) hinzufügen  Max. 6 Satz   sets	(9) (10)    x 1 K1-41060    x 1 K1-41061  Max. 6 Satz   sets	(40)    x 2 K3-02045 M10 x 25  	(43)    x 2 K3-03051 M10  	(58)    x 2 K3-02386 M8 x 40  	
		(59)    x 1 K3-06269 Ø6 x 35  	(61)    x 2 K3-03047 M8  	(65)    x 2 K3-04099 Ø10  	





<b>1068052 / 1068053</b>		<b>Stufe</b> <b>Step</b> 80 / 100 cm
(11)    x 1 K1-41071    80 cm K1-41081    100 cm	(66)      x 4 K3-02216 M6 x 16	





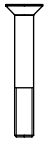




<b>1068031</b>		<i>Steiggeländer für 6 Stufen</i> <i>Standard banister for 6 steps</i>	
<p>14</p>  <p>× 6 K2-41052</p>	<p>15</p>  <p>× 1 K1-01221</p>	<p>16</p>  <p>× 6 K1-02130</p>	<p>17</p>  <p>× 2 K2-04040</p>
<p>18</p>  <p>× 6 K1-41056</p> <p>1010mm</p> <p>Ø 25mm</p>			
<p>19</p>  <p>× 1 K1-01100</p> <p>Ø 40mm</p> <p>2000mm</p>			
<p>46</p>  <p>× 6 K3-01034 M4 x 30</p>	<p>47</p>  <p>× 6 K3-03004 M4</p>	<p>48</p>  <p>× 12 K3-05006 M6 x 8</p>	<p>68</p>  <p>× 16 K3-05052 M5 x 16</p>

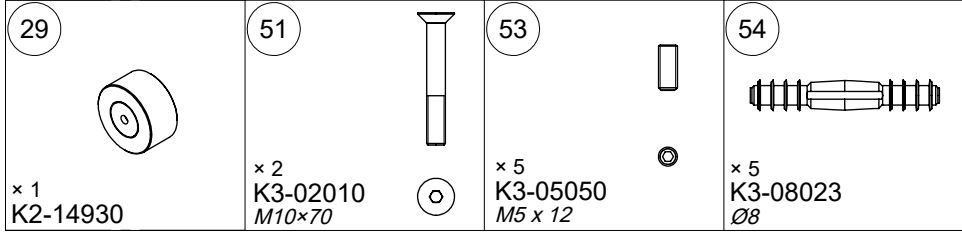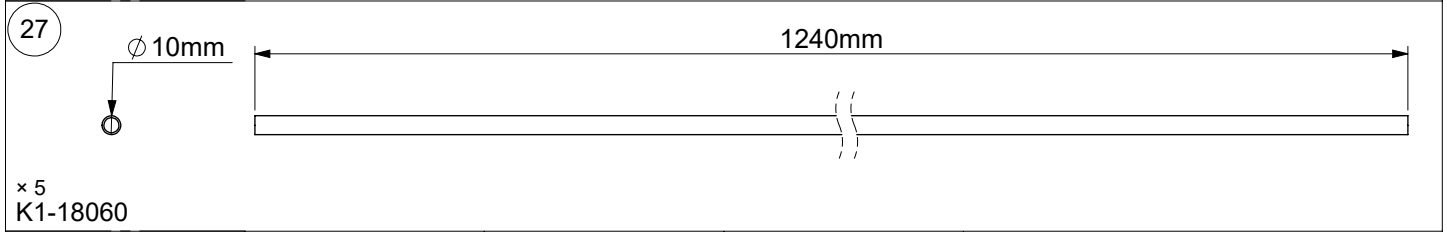
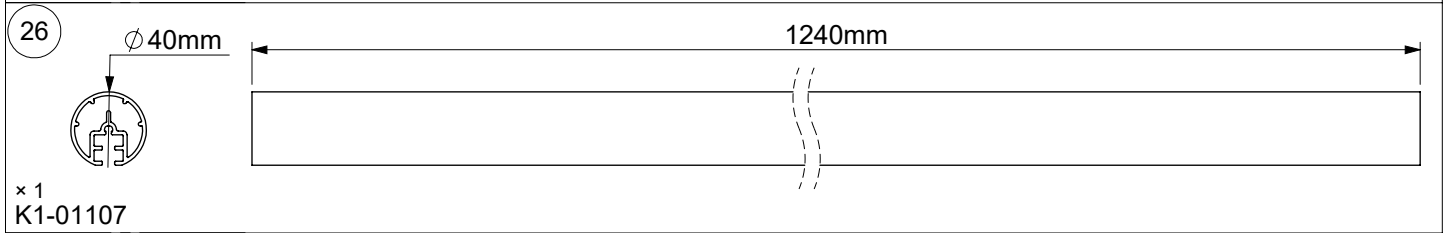
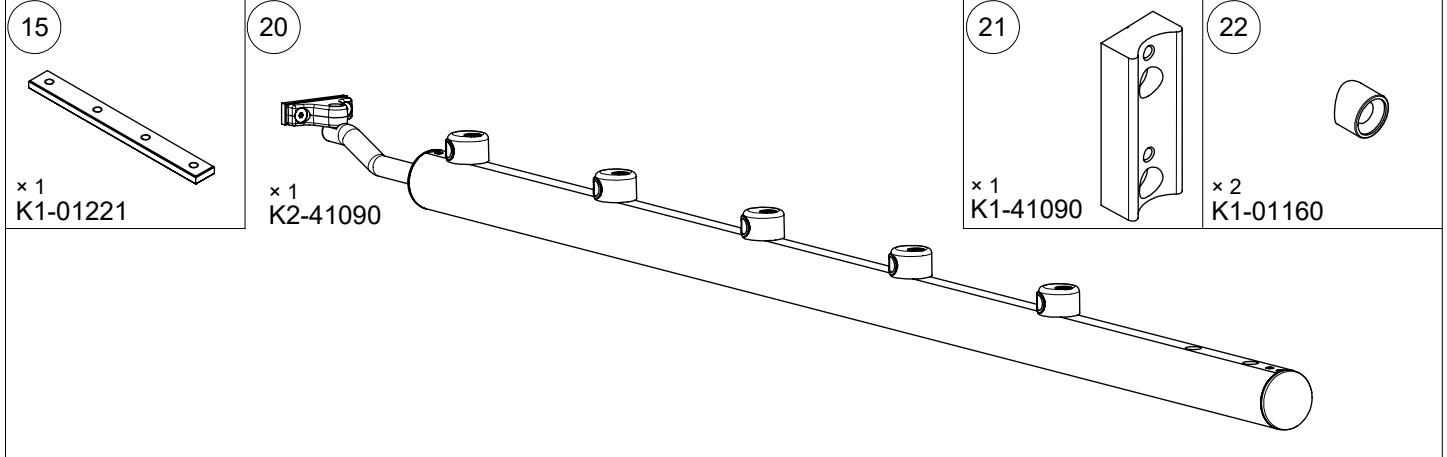
<b>1068040</b>		<i>Steiggeländer PROVA Starter-Set für 4 Stufen</i> <i>PROVA banister start for 4 steps</i>		
<p>17</p>  <p>× 2 K2-04040</p>	<p>20</p>  <p>× 2 K2-41090</p>		<p>21</p>  <p>× 2 K1-41090</p>	<p>22</p>  <p>× 4 K1-01160</p>
<p>26</p>  <p>× 1 K1-01107</p> <p>Ø 40mm</p> <p>1240mm</p>				
<p>27</p>  <p>× 5 K1-18060</p> <p>Ø 10mm</p> <p>1240mm</p>				
<p>28</p>  <p>× 10 K1-01010</p>	<p>29</p>  <p>× 1 K2-14930</p>	<p>51</p>  <p>× 4 K3-02010 M10 x 70</p>		

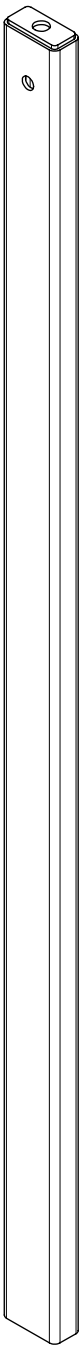
**1068041**

**Steiggeländer PROVA Ergänzungs-Set für 4 Stufen**  
**PROVA banister extension for 4 steps**




<b>1068098</b>		<i>Unterstützung Support</i>			<b>OPTION</b>	
<p>24</p>  <p>× 1 K1-41950</p>	<p>26</p>  <p>× 1 K1-41955</p>	<p>27</p>  <p>× 1 K1-41956</p>	<p>41</p>  <p>× 1 K3-04110 Ø10</p>	<p>43</p>  <p>× 1 K3-03051 M10</p>	<p>52</p>  <p>× 1 K3-02375 M10 x 75</p>	
	<p>53</p>  <p>× 2 K3-05007 M5 x 5</p>	<p>54</p>  <p>× 1 K3-08002 Ø8 x 40</p>	<p>55</p>  <p>× 1 K3-06032 Ø6 x 60</p>			

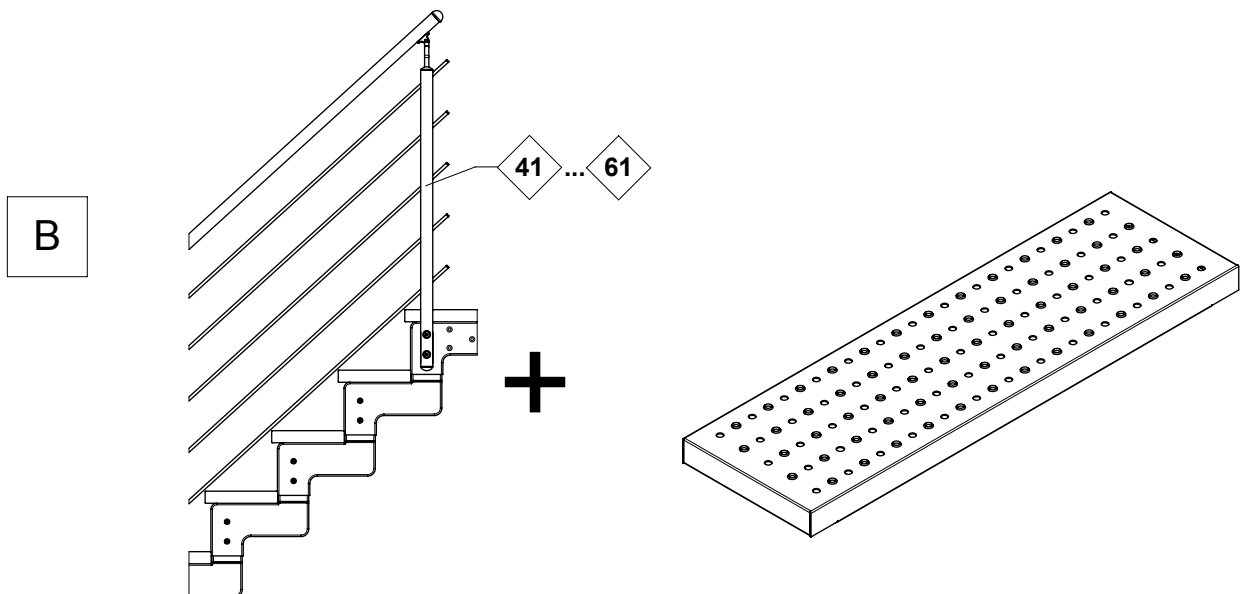
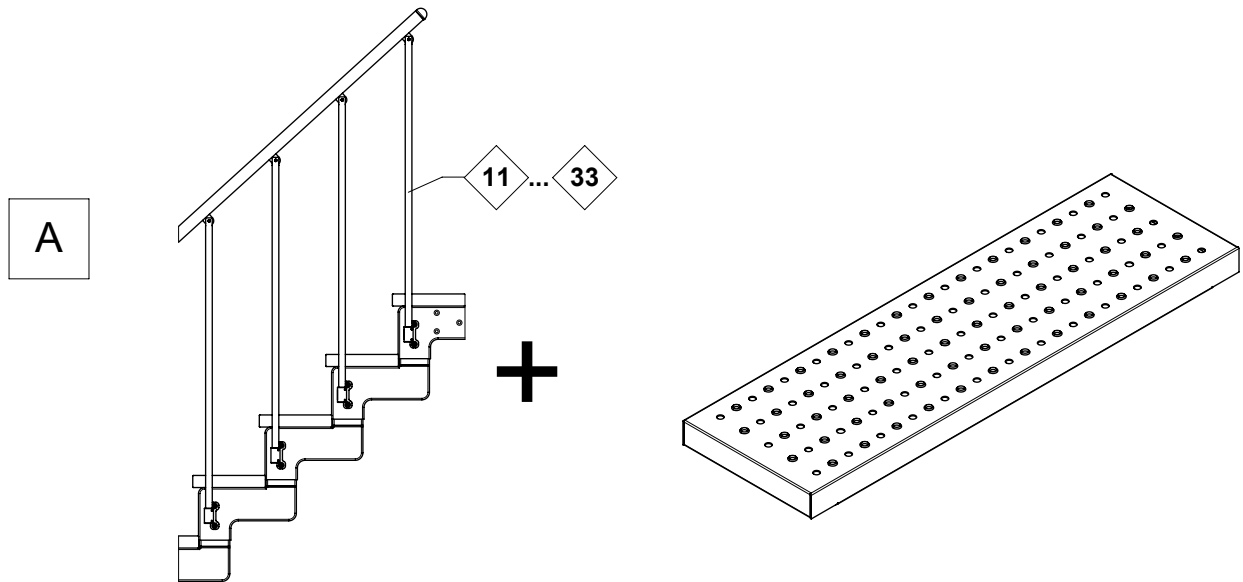
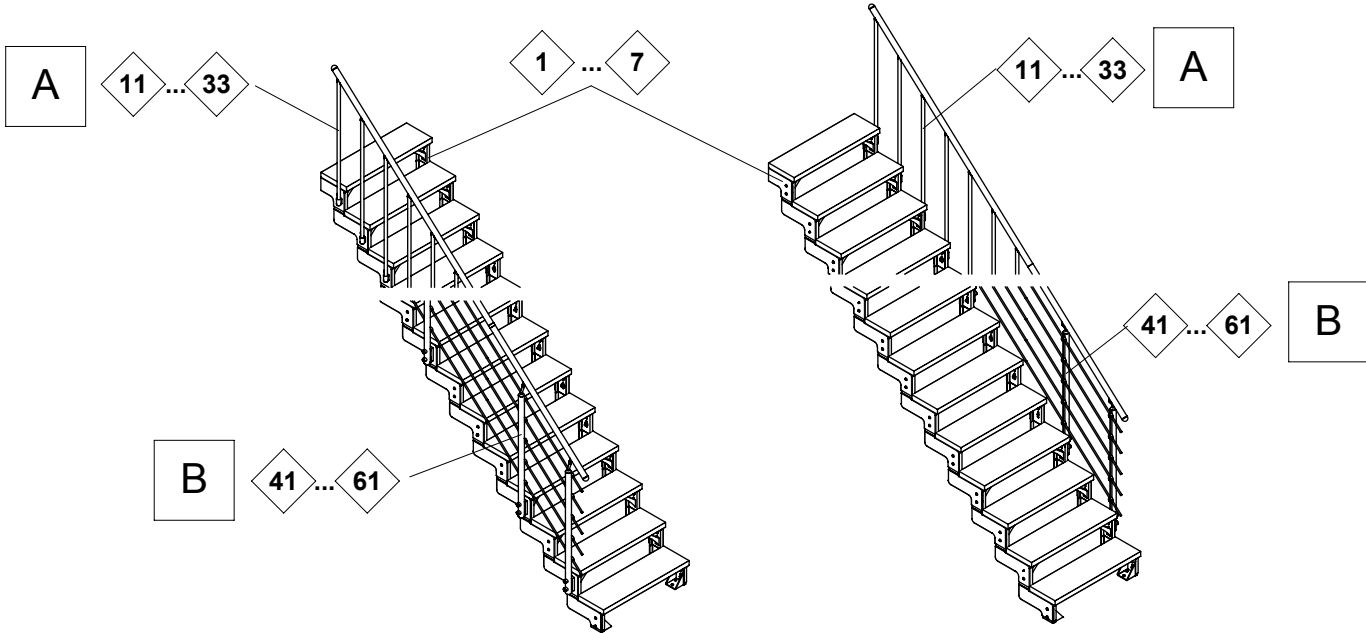


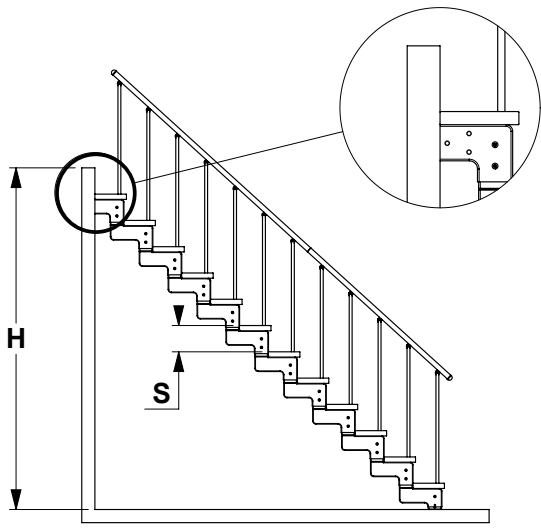




H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	540	570	600	630	660
3	720	760	800	840	880
4	900	950	1000	1050	1100
5	1080	1140	1200	1260	1320
6	1260	1330	1400	1470	1540
7	1440	1520	1600	1680	1760
8	1620	1710	1800	1890	1980
9	1800	1900	2000	2100	2200
10	1980	2090	2200	2310	2420
11	2160	2280	2400	2520	2640
12	2340	2470	2600	2730	2860




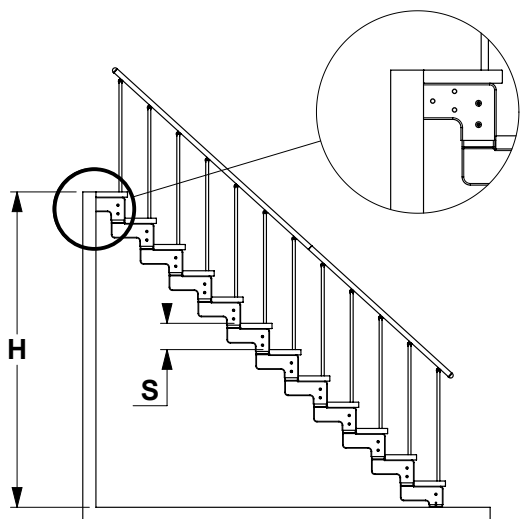




H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	360	380	400	420	440
3	540	570	600	630	660
4	720	760	800	840	880
5	900	950	1000	1050	1100
6	1080	1140	1200	1260	1320
7	1260	1330	1400	1470	1540
8	1440	1520	1600	1680	1760
9	1620	1710	1800	1890	1980
10	1800	1900	2000	2100	2200
11	1980	2090	2200	2310	2420
12	2160	2280	2400	2520	2640

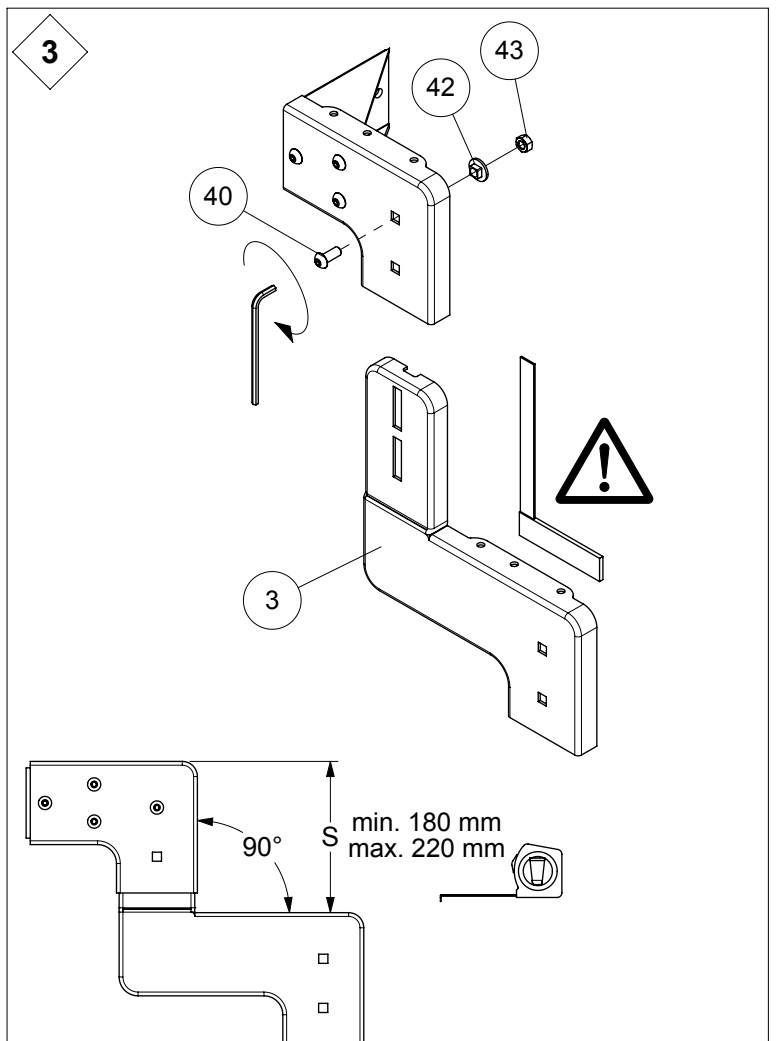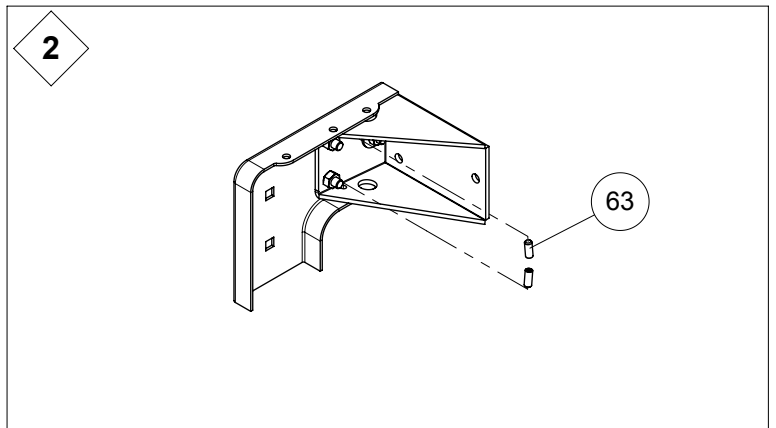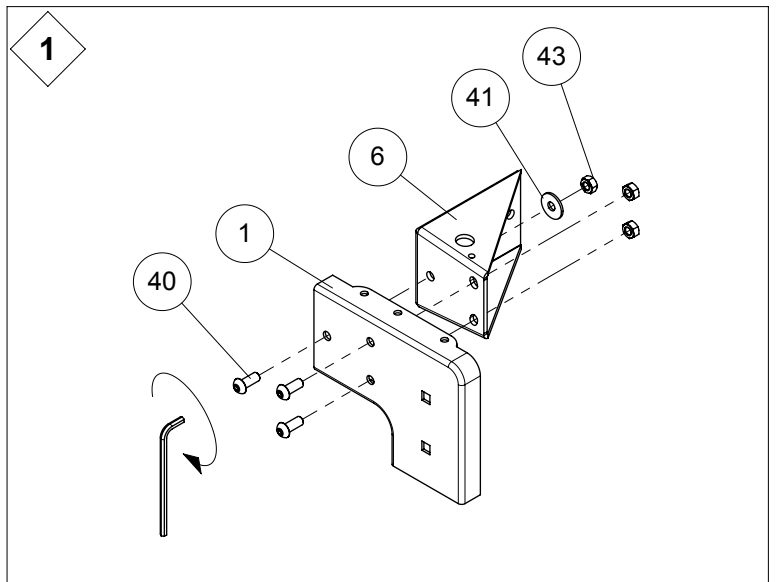



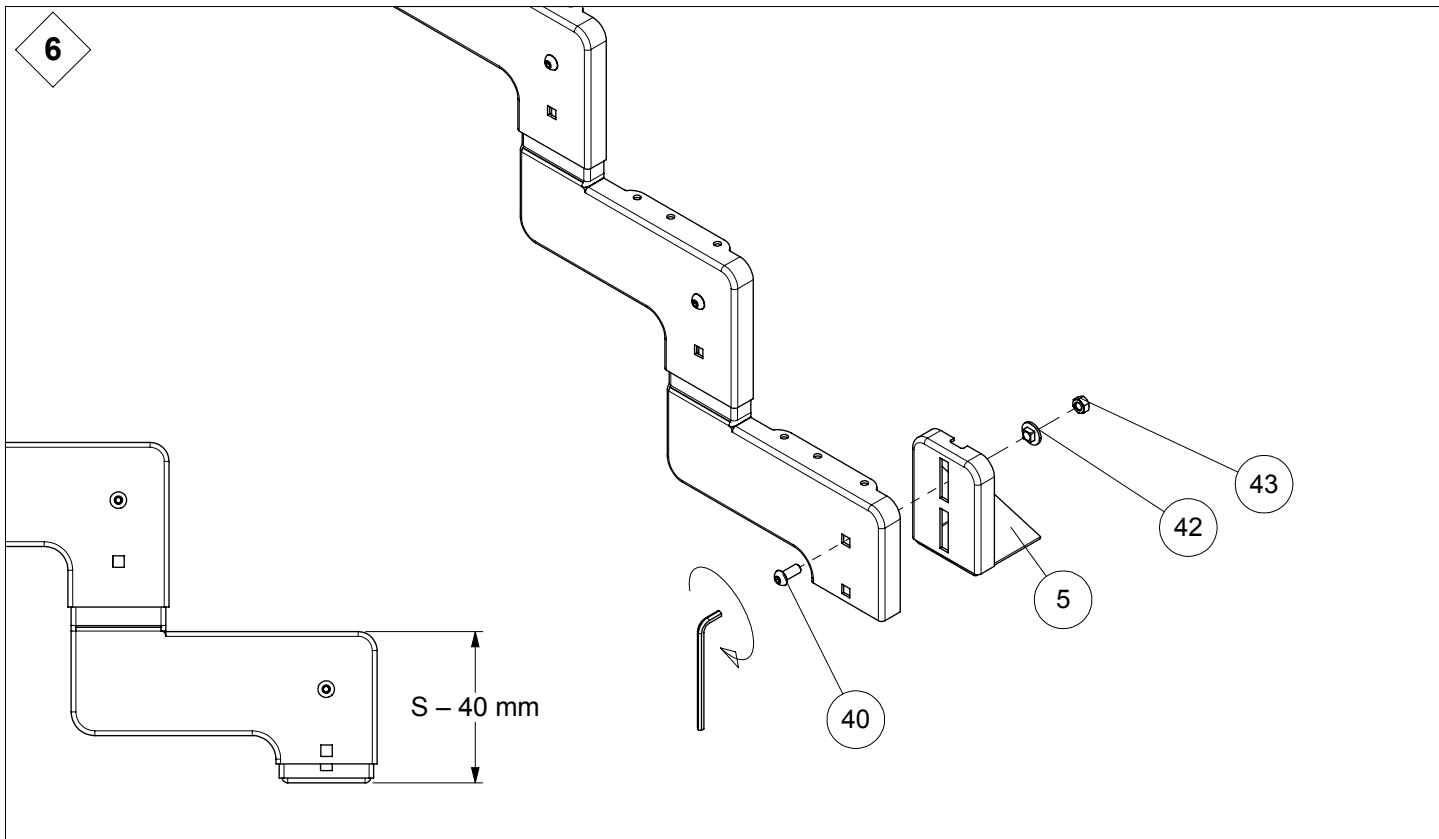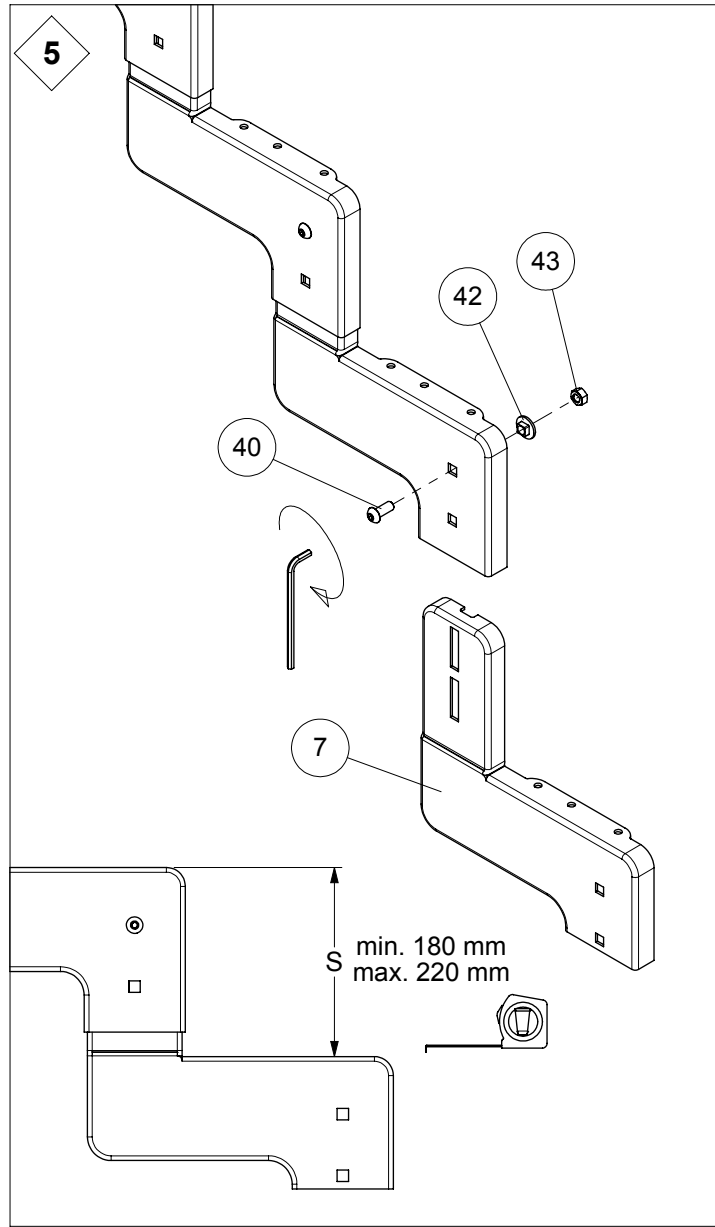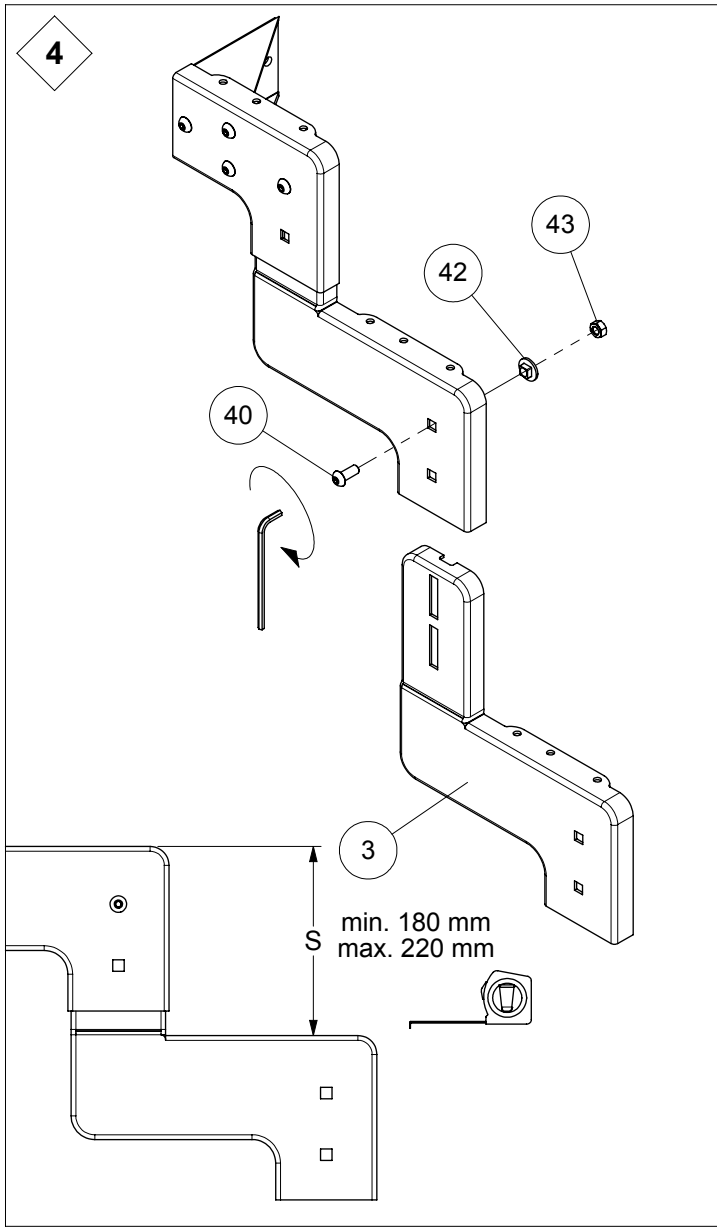

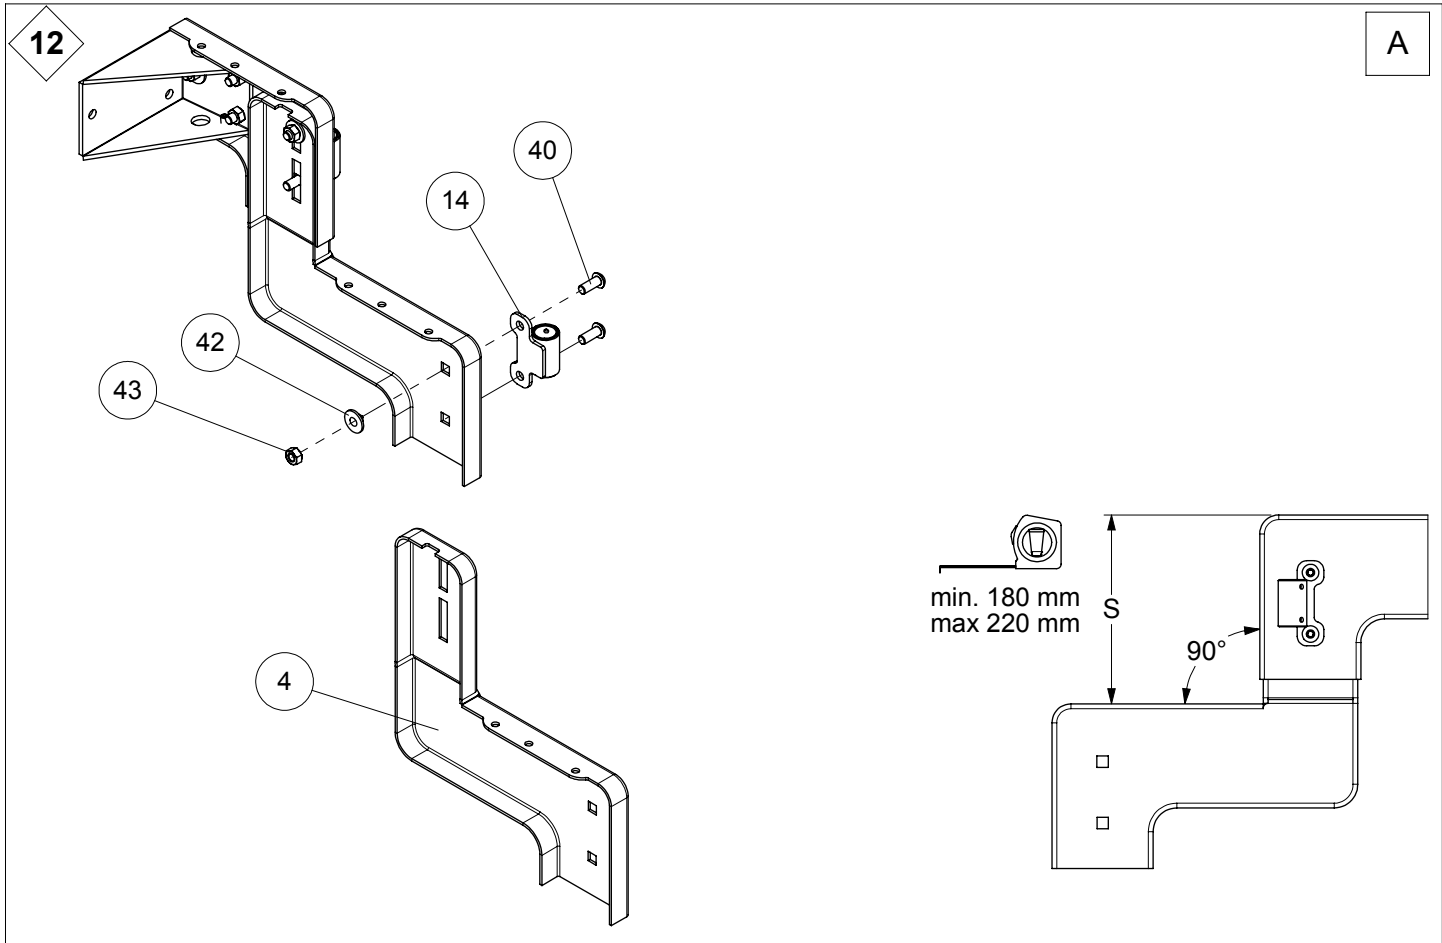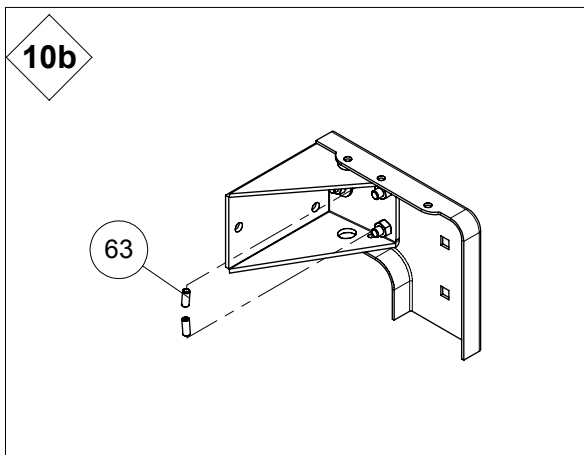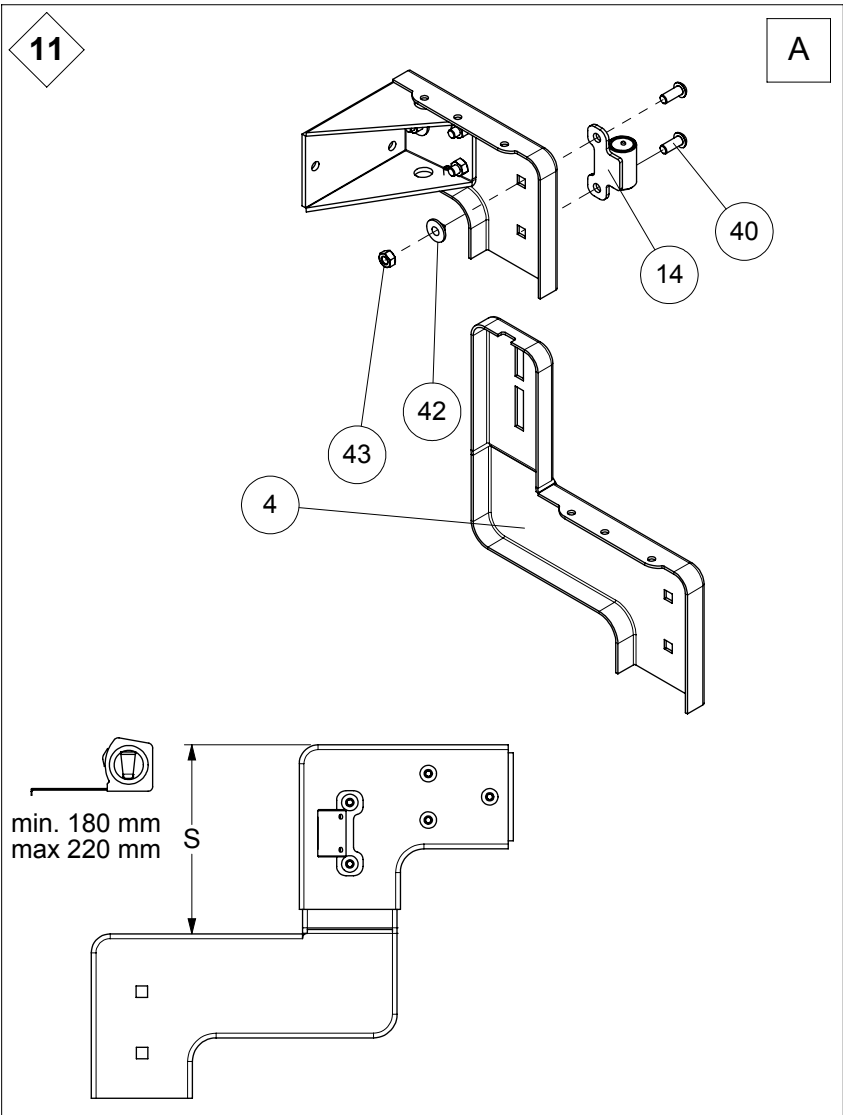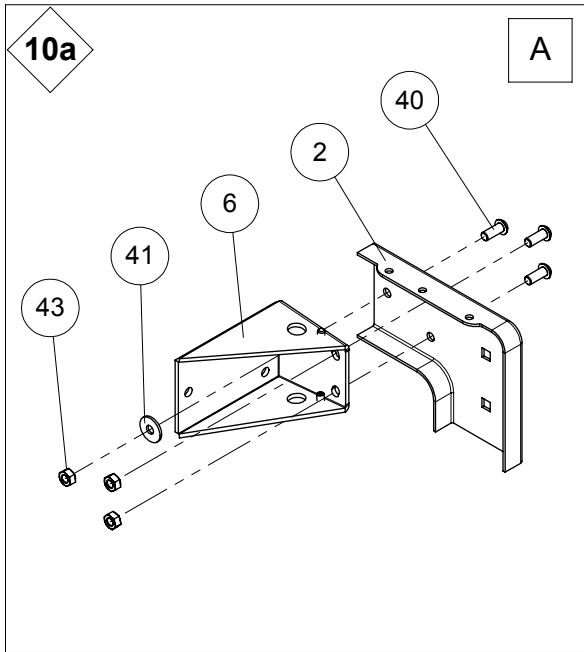


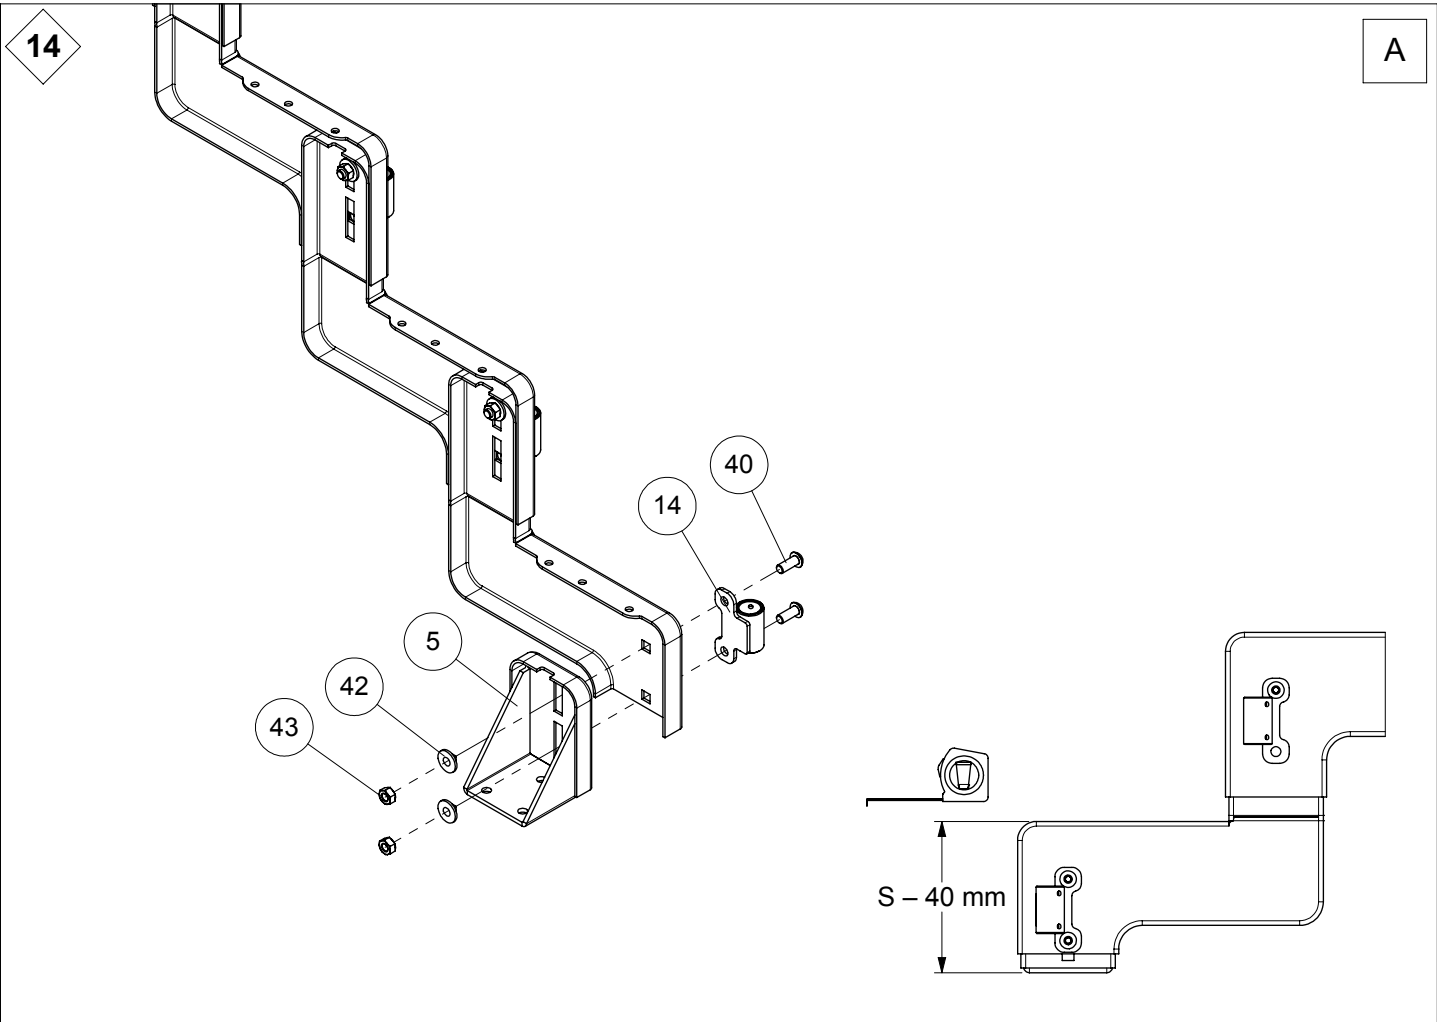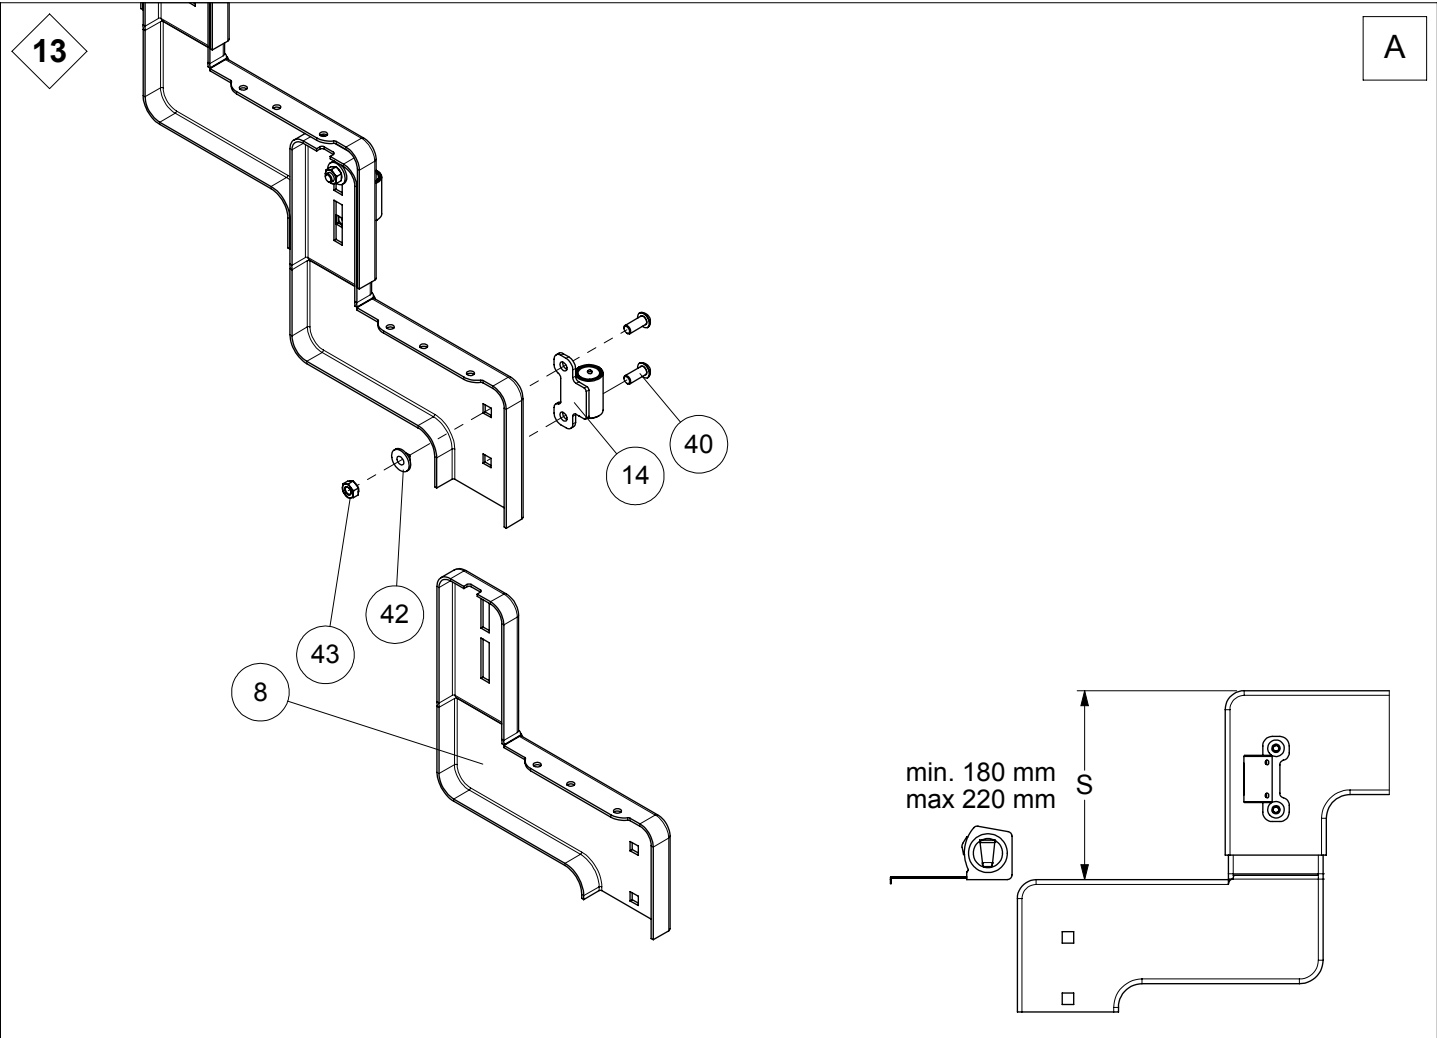

15


A

Stufe / Step	W
80 cm	803 mm
100 cm	1003 mm

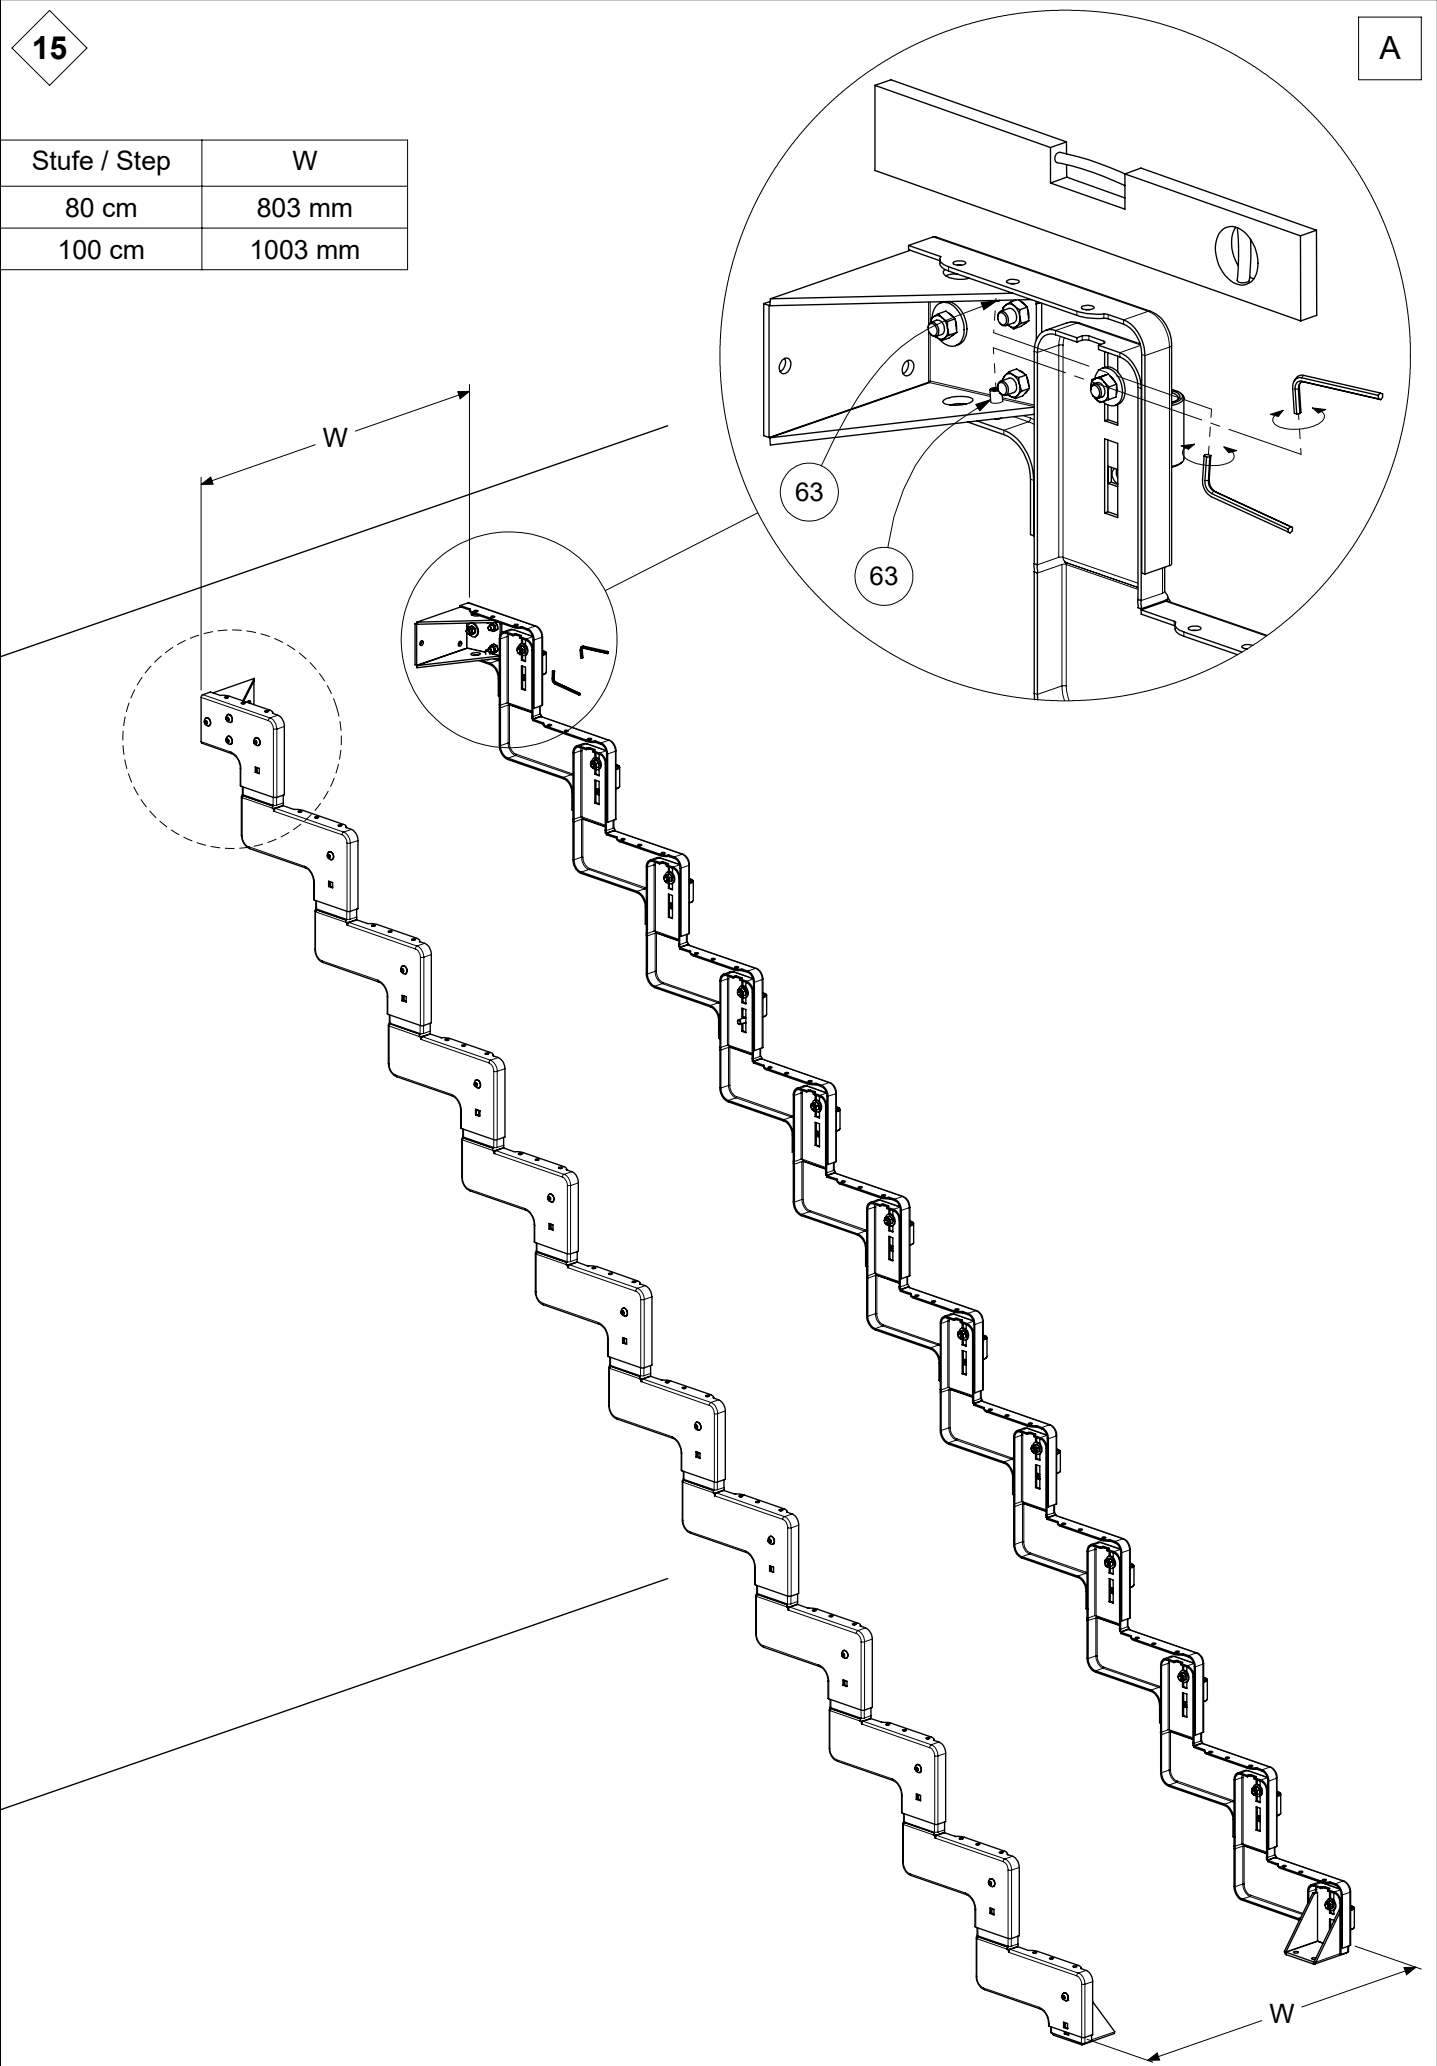


16


A

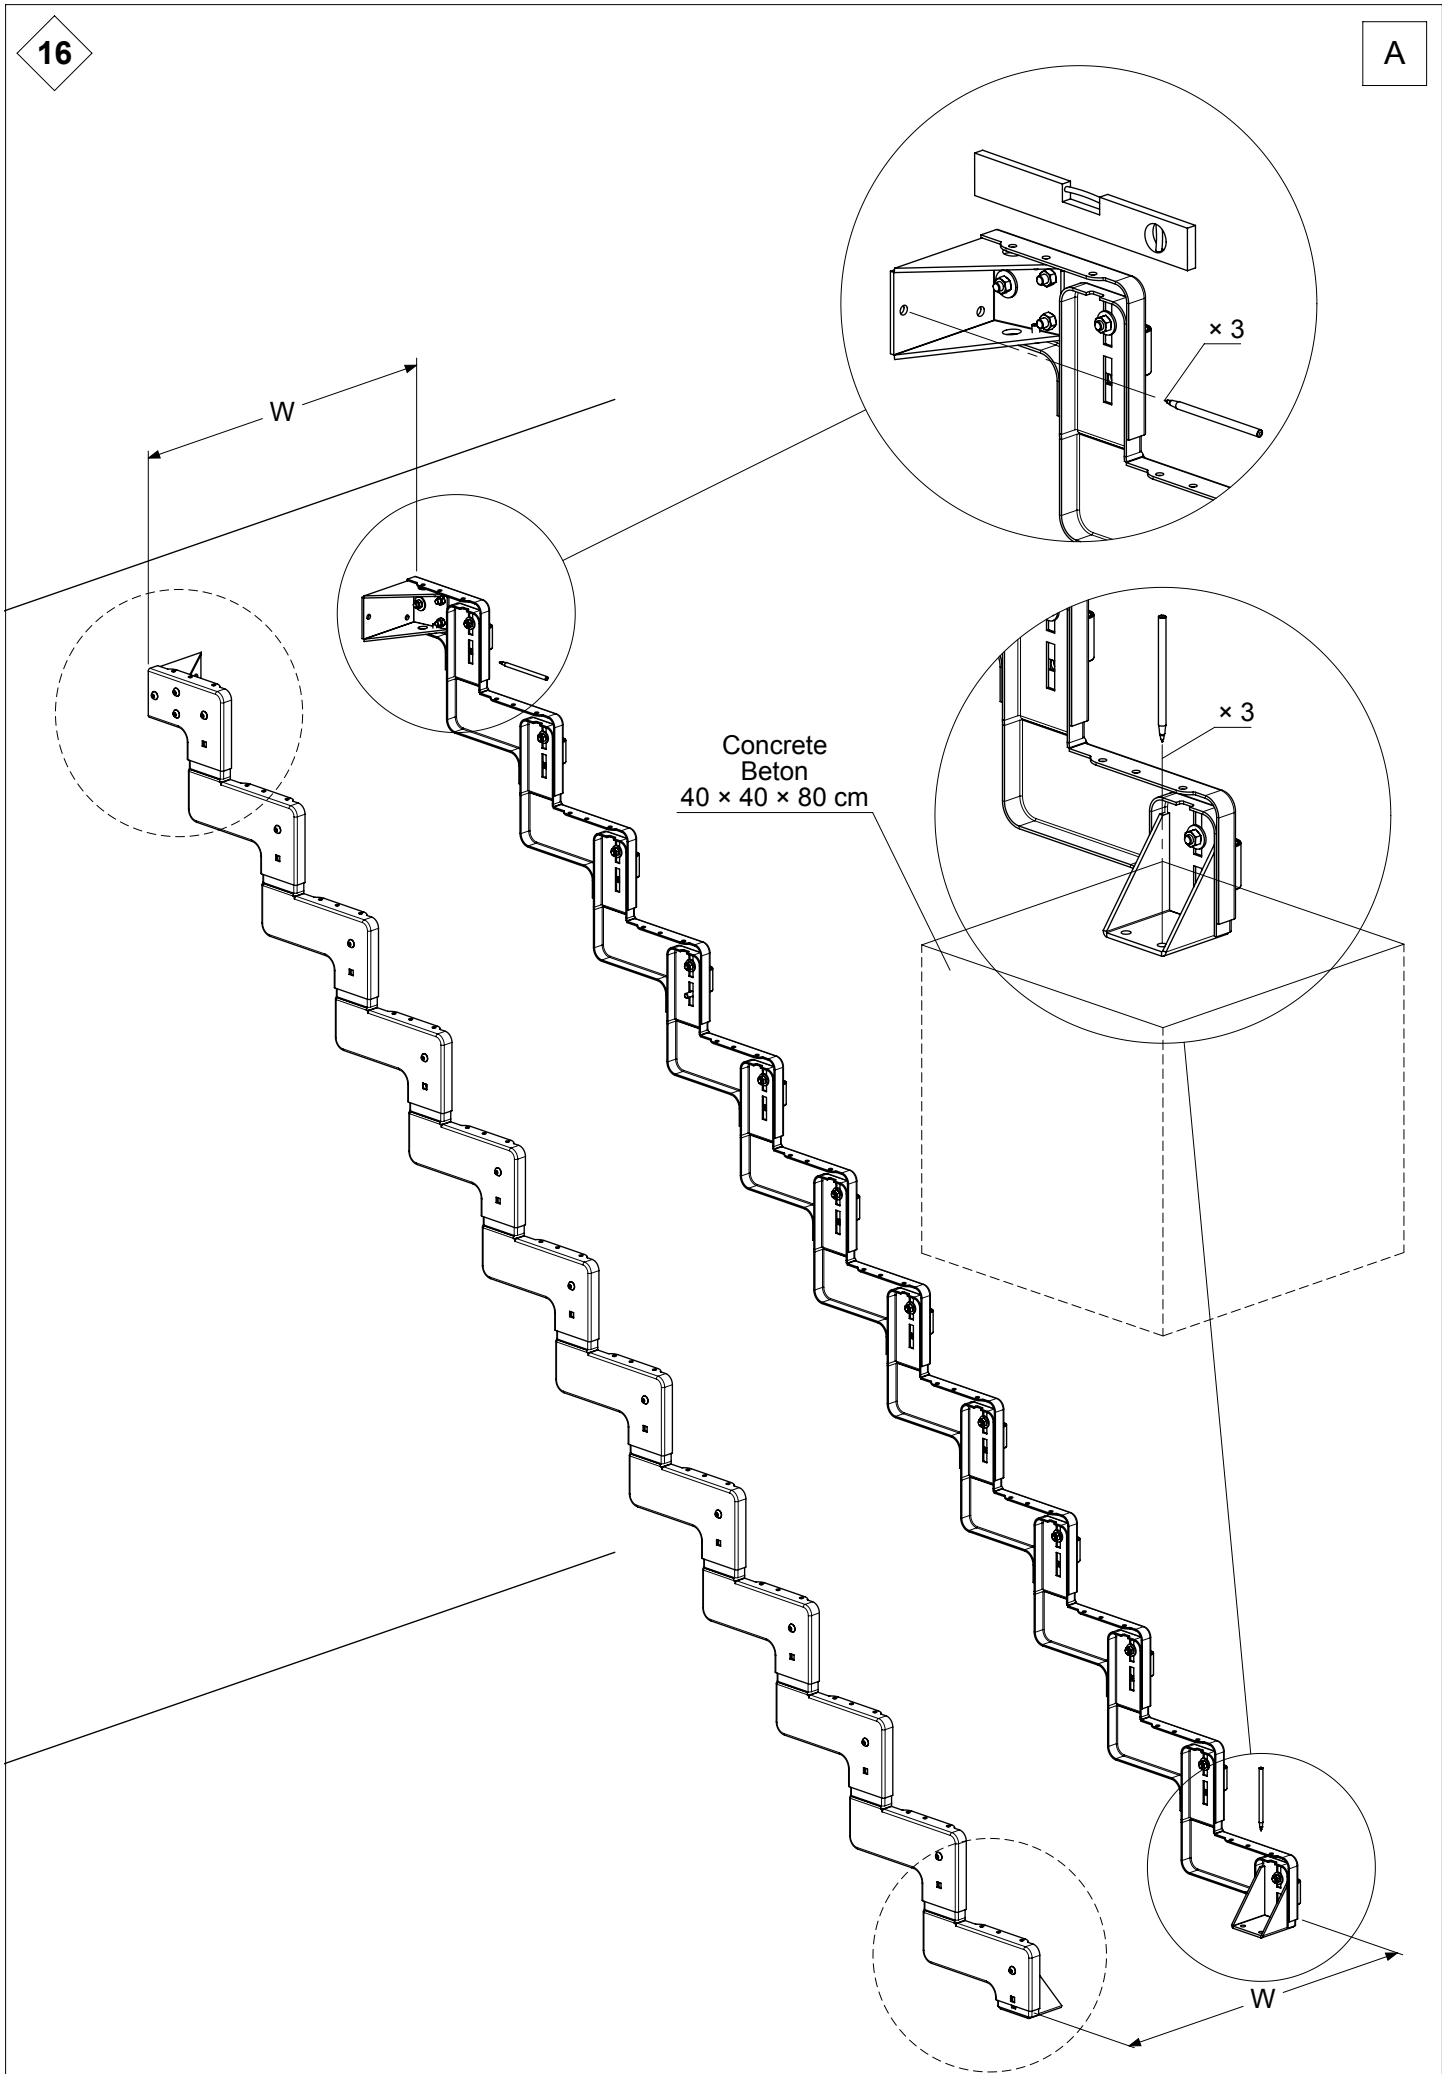


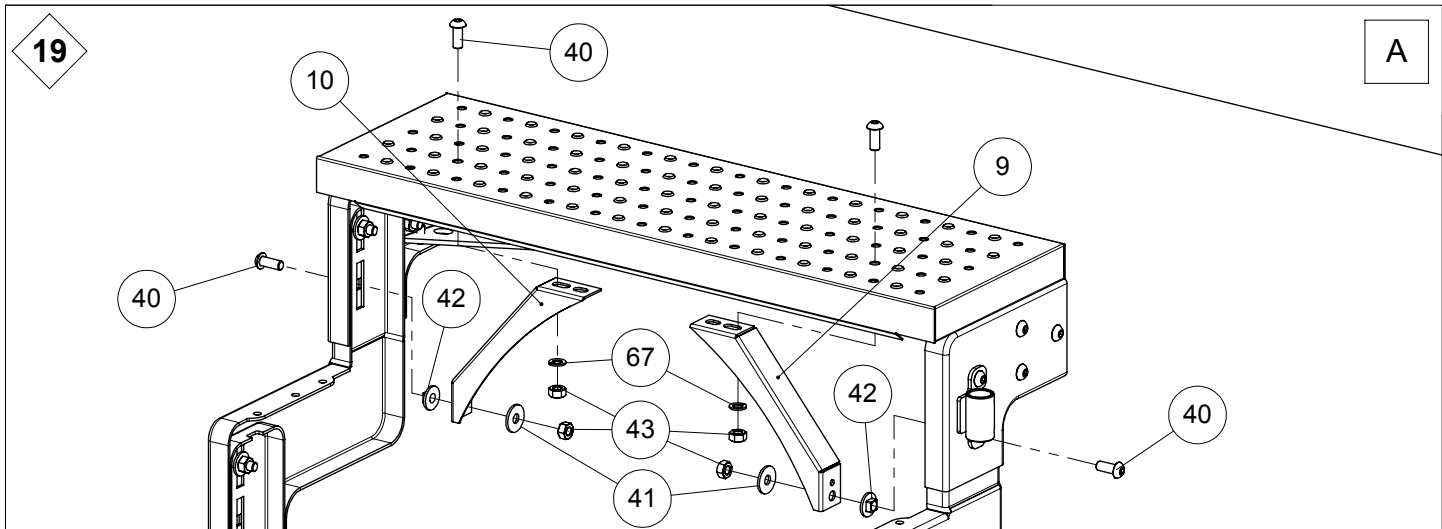
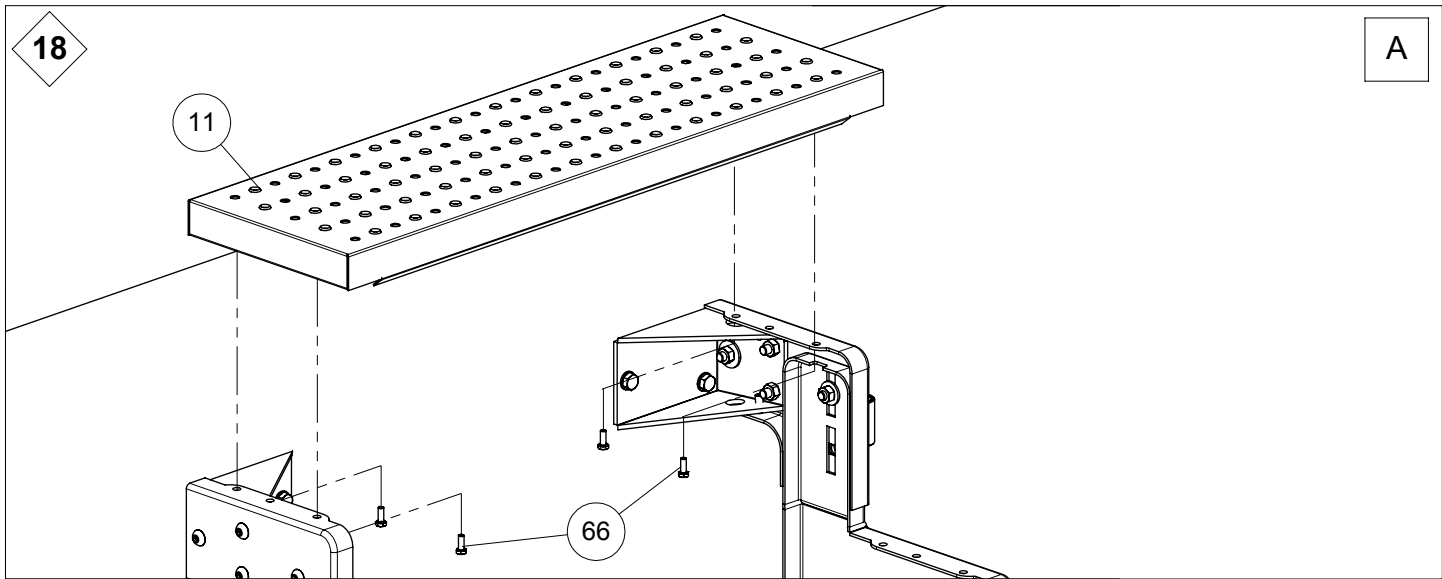
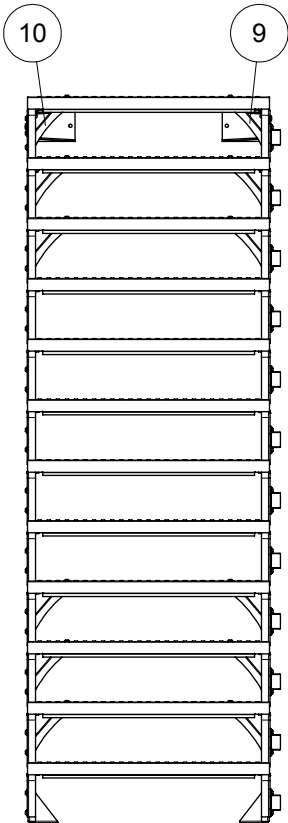
17




A

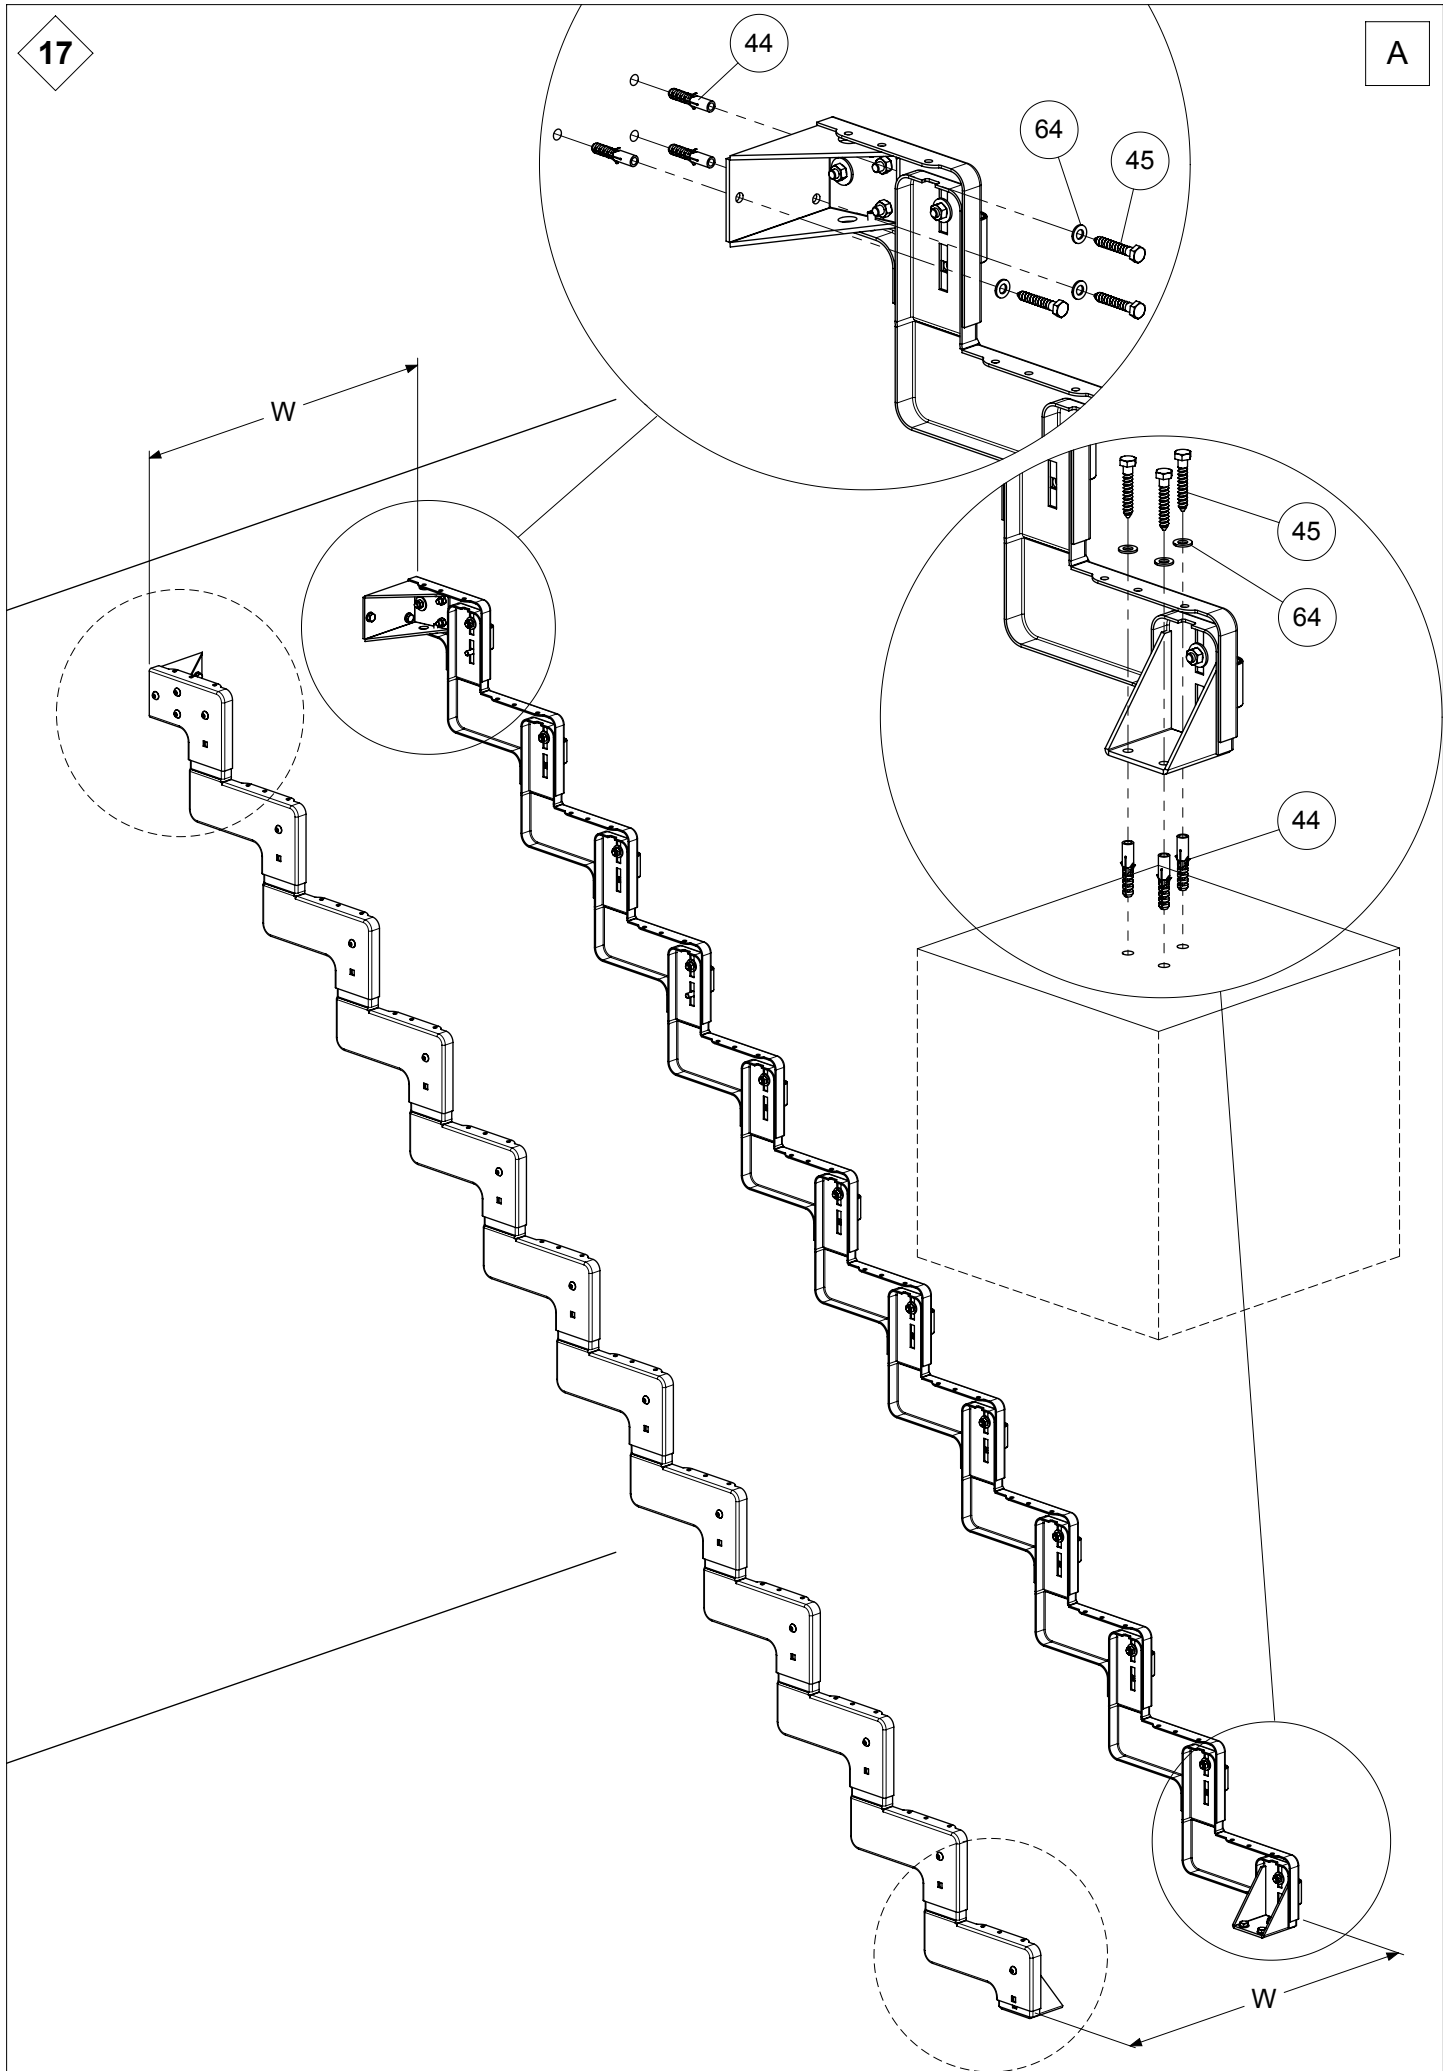



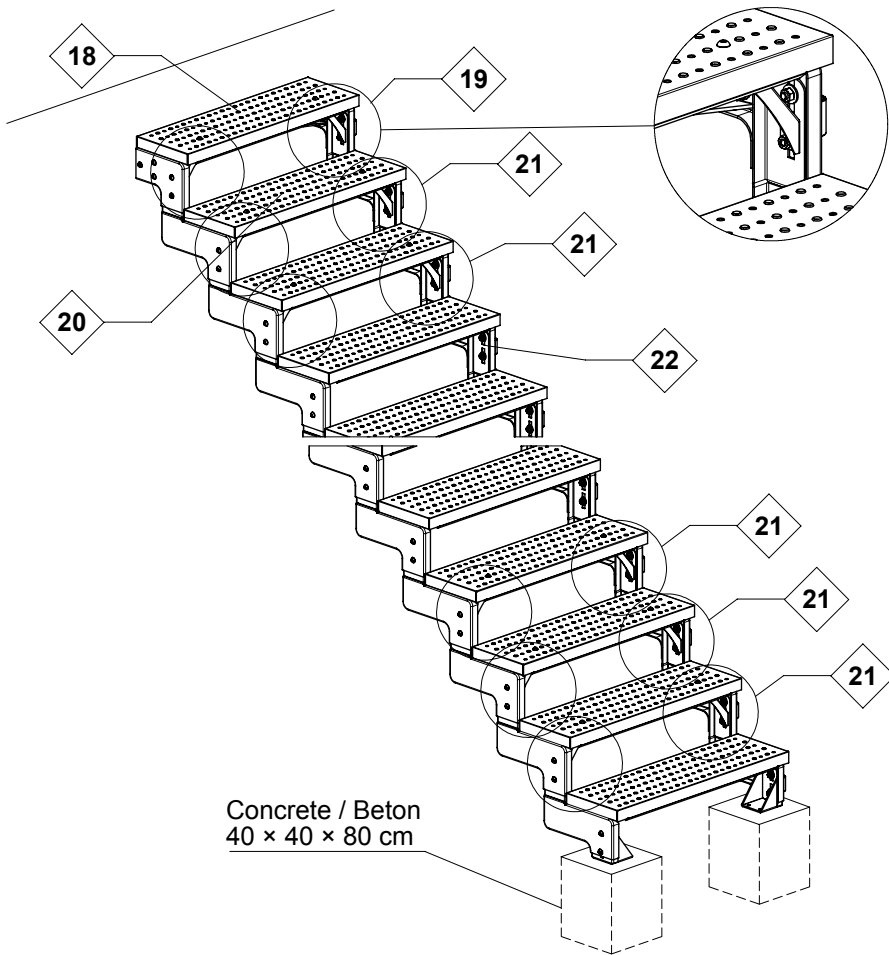






  
 If more than  
6 steps:  
Add  
 (10) + (9)  
 Wenn mehr als  
6 Stufen:  
 (10) + (9)  
 hinzufügen







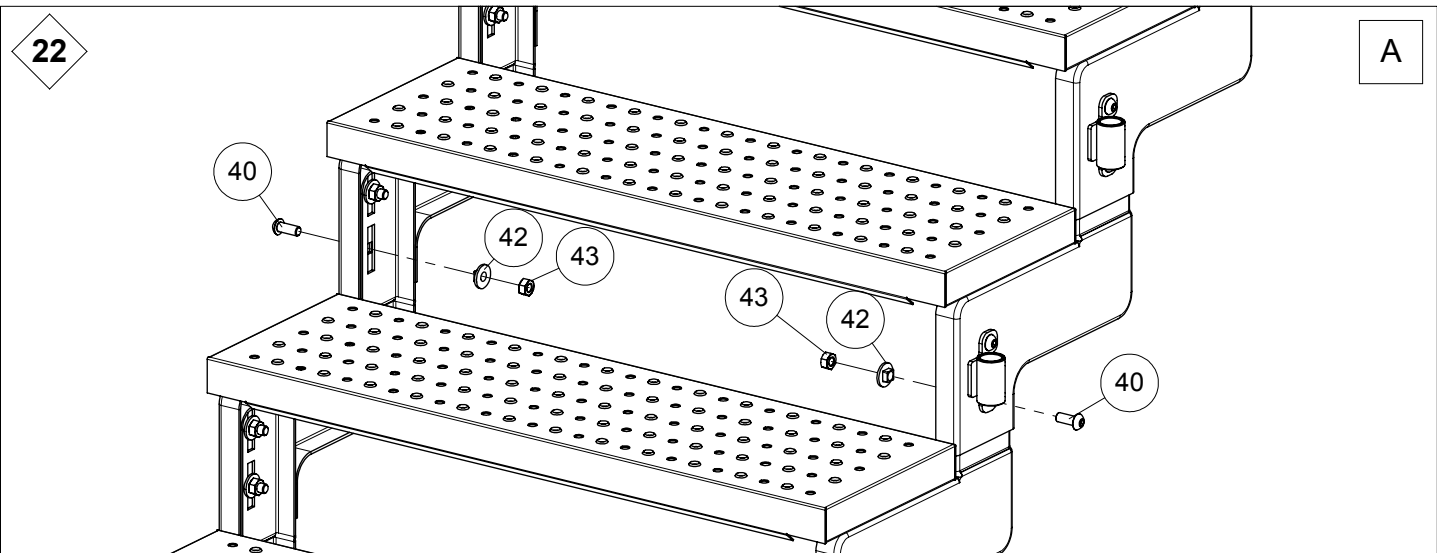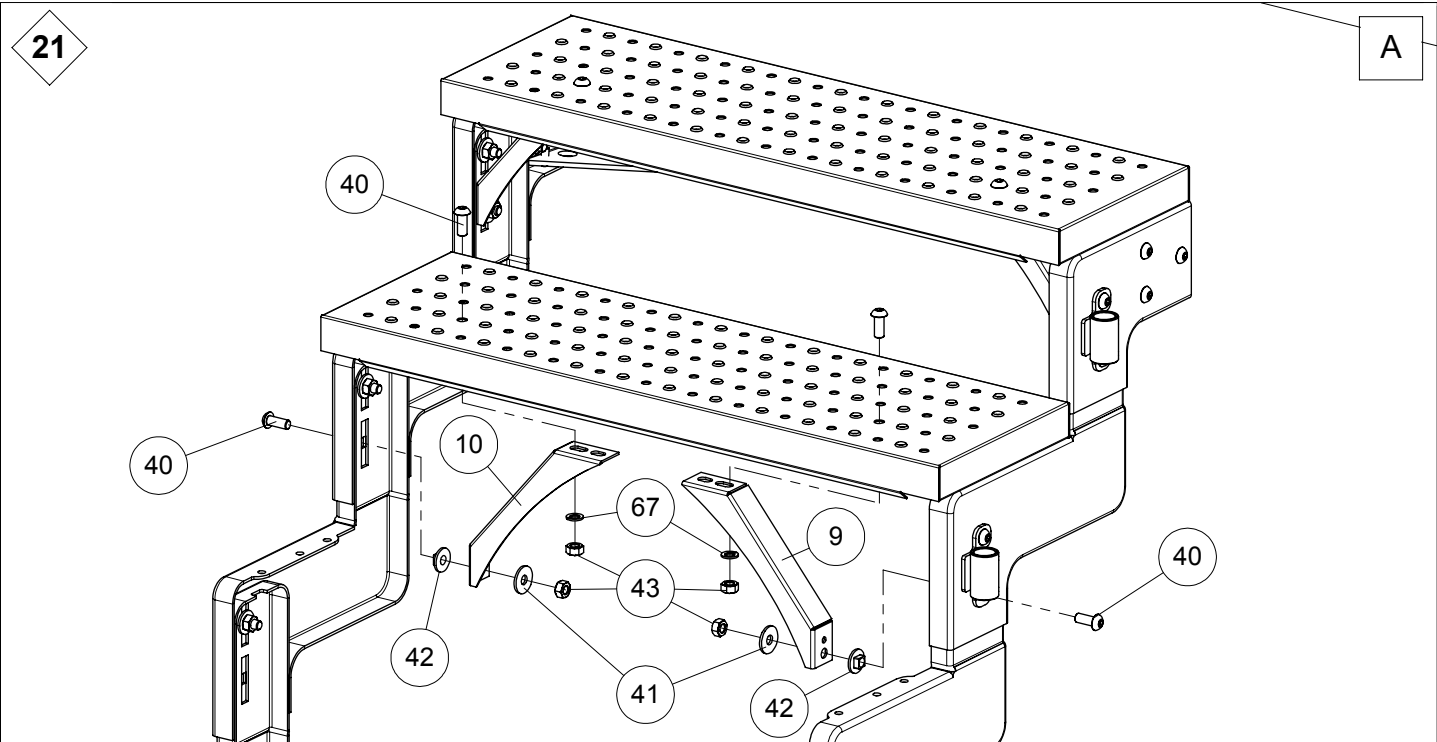
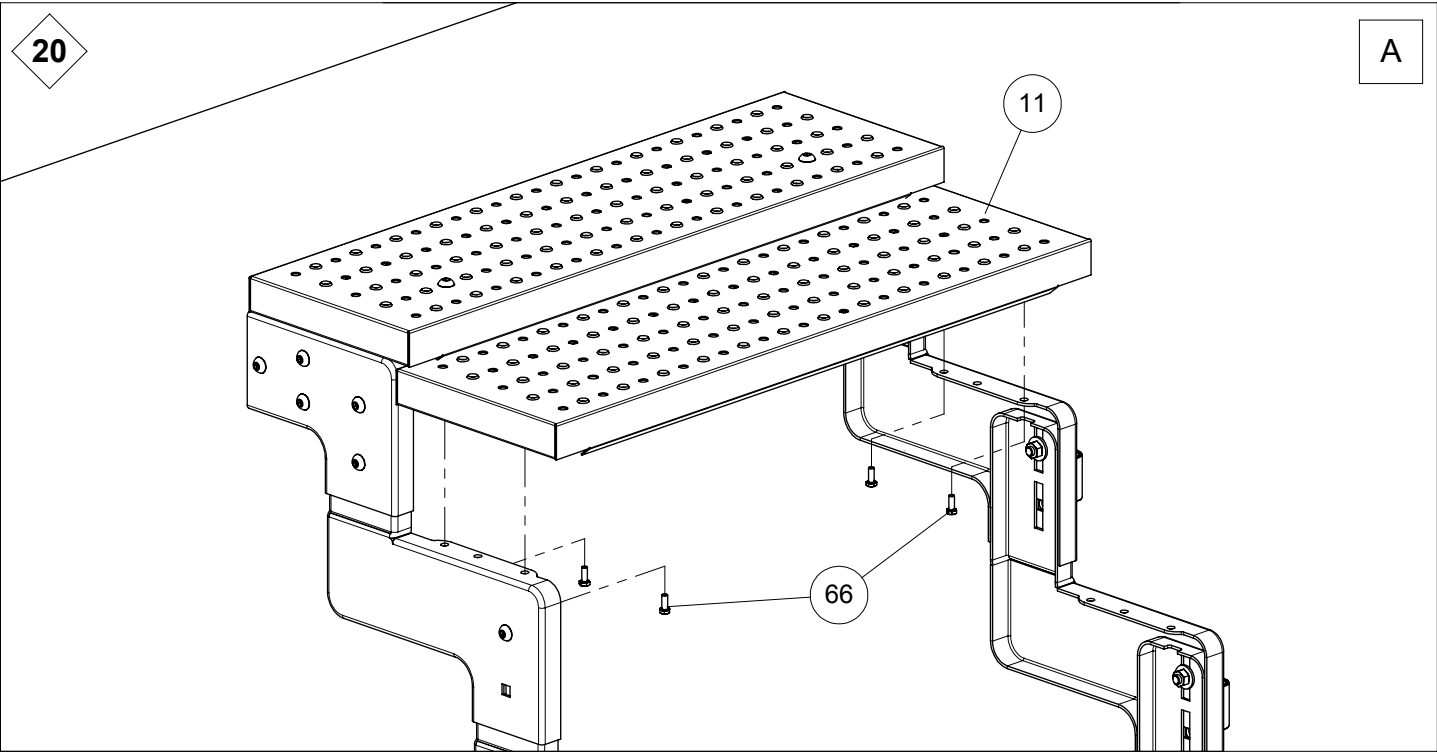




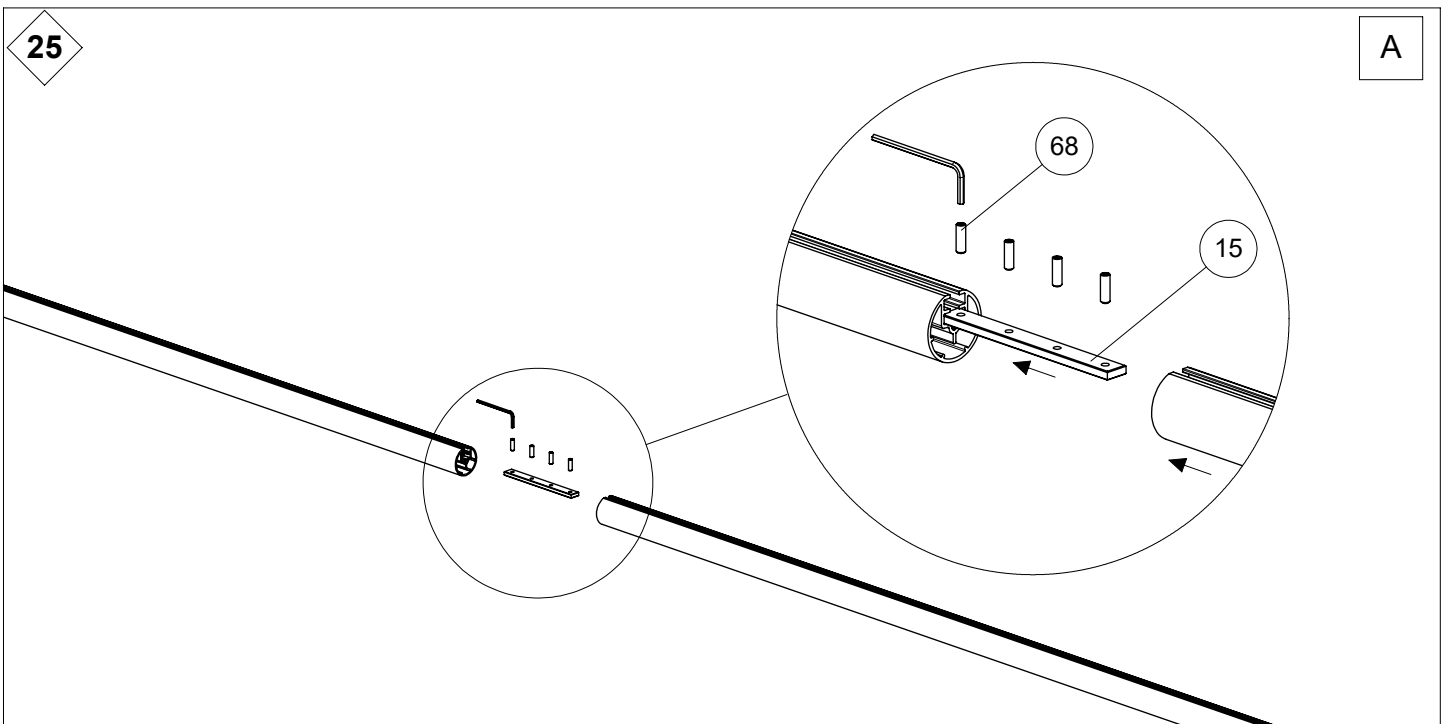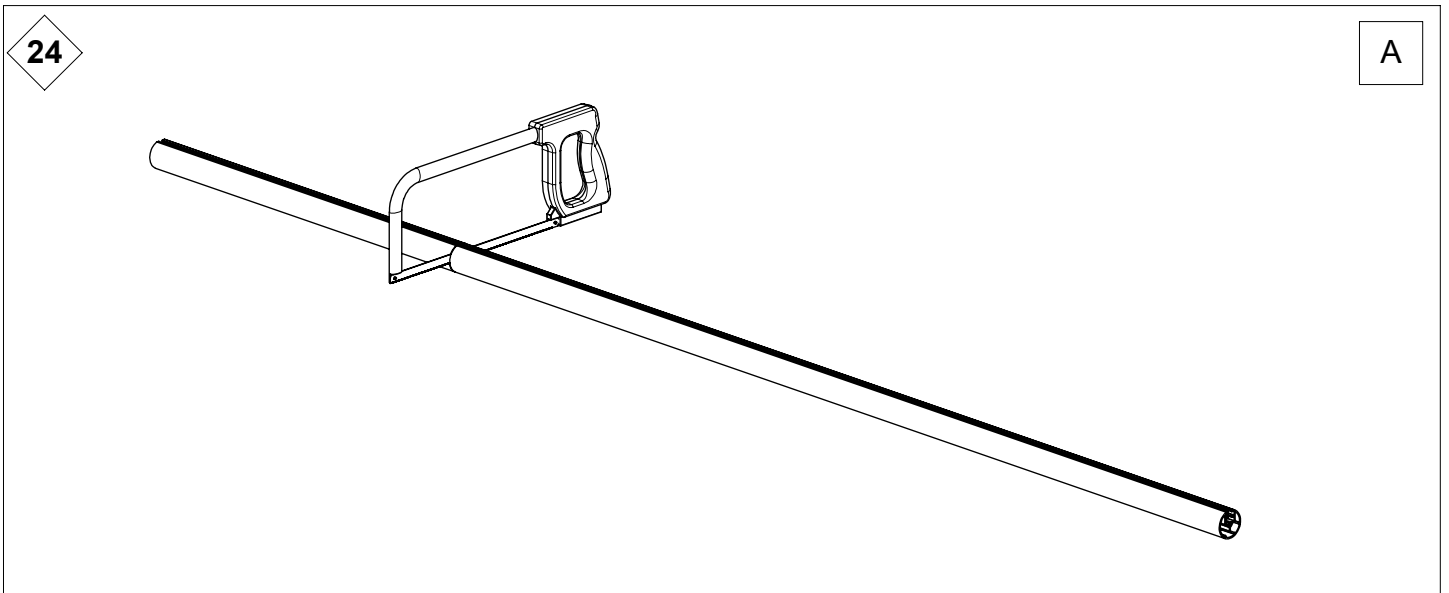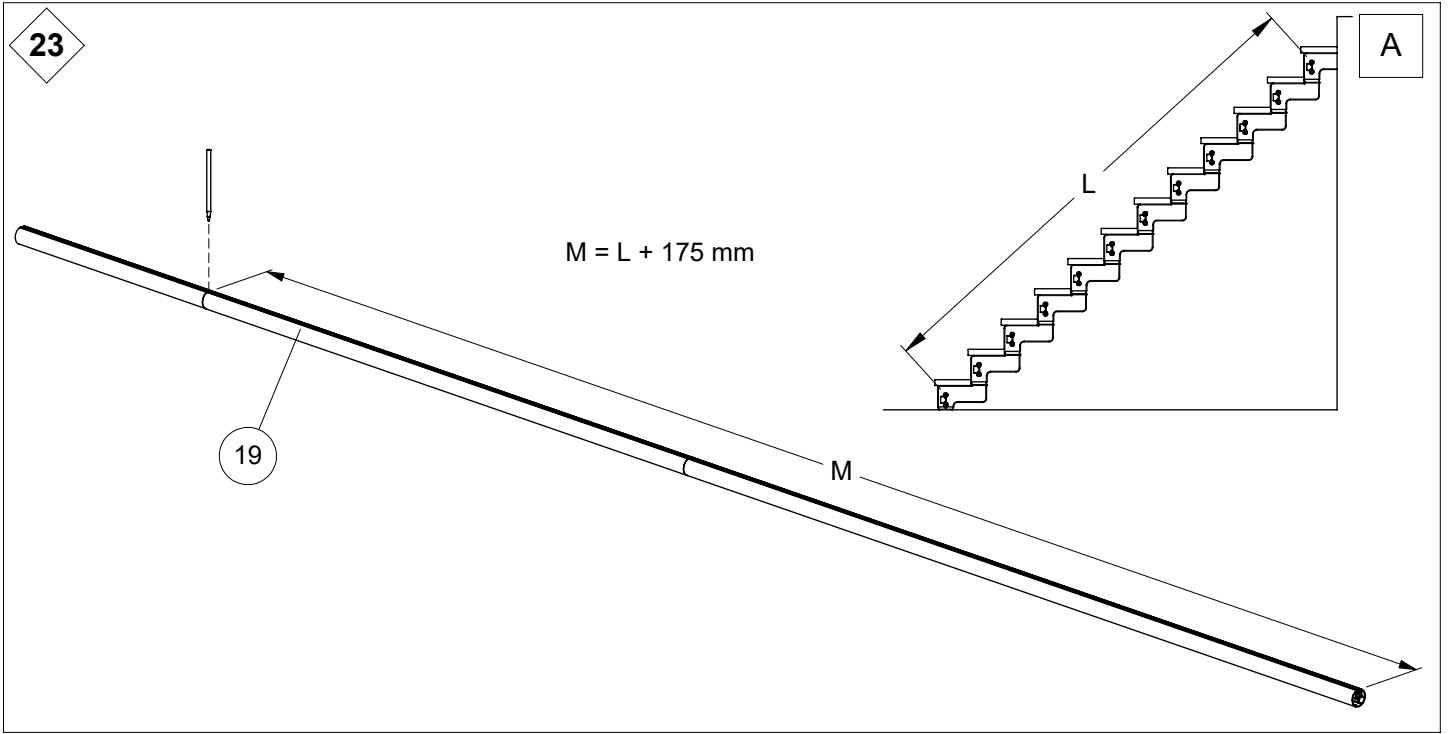

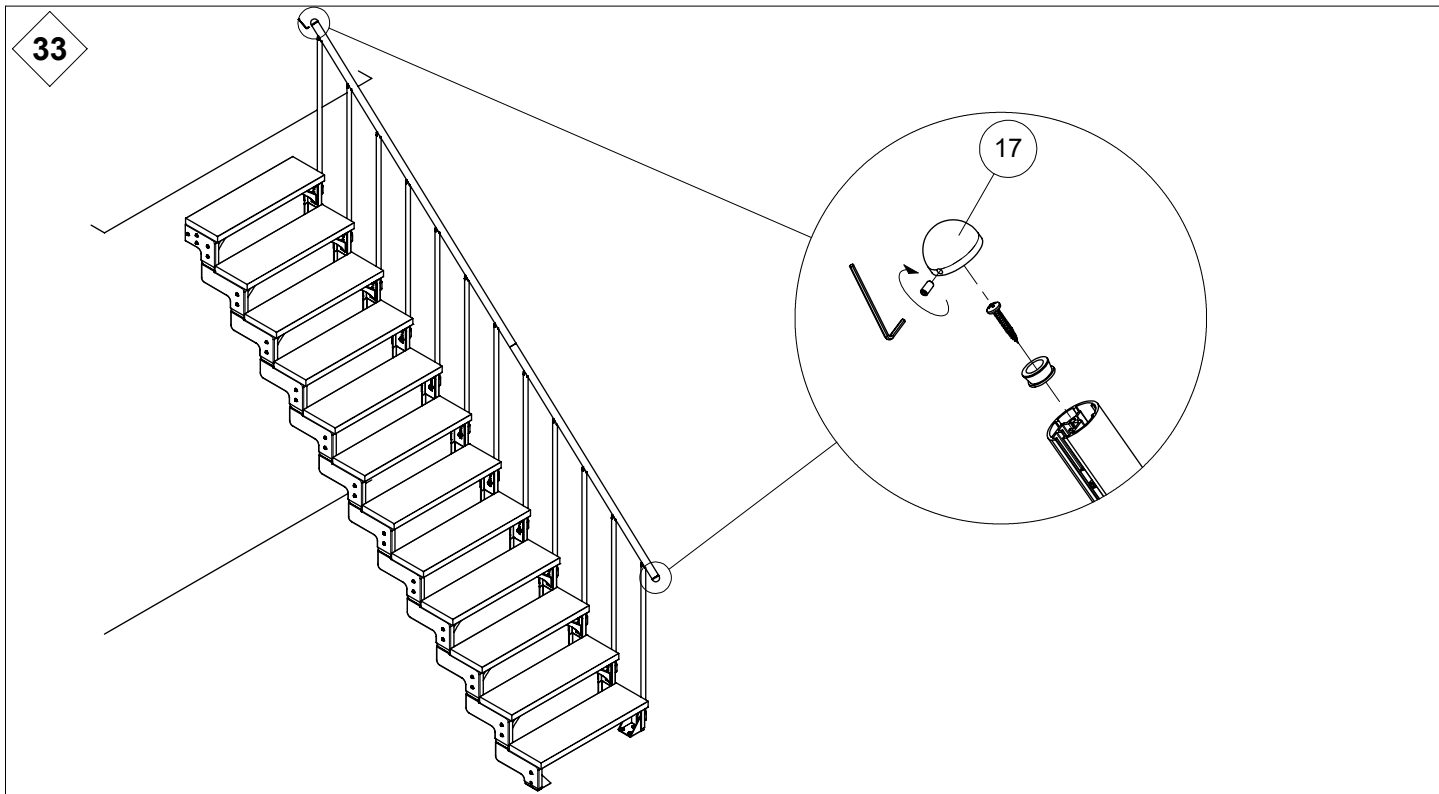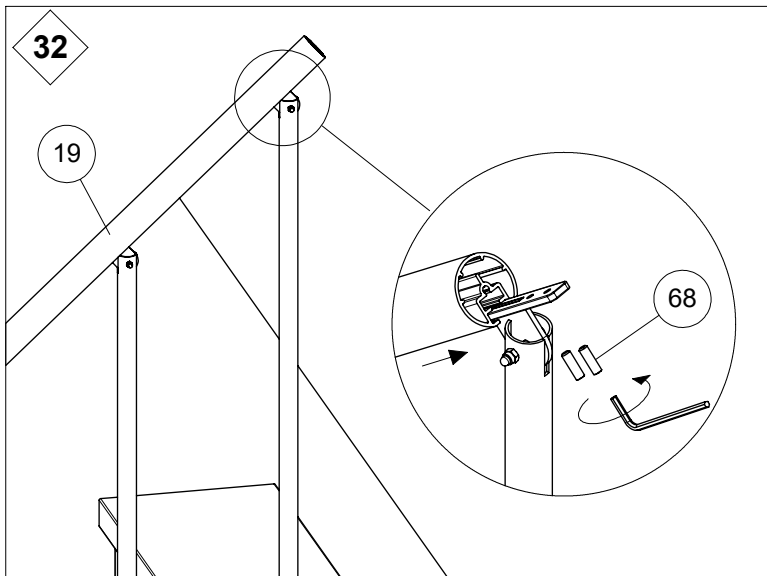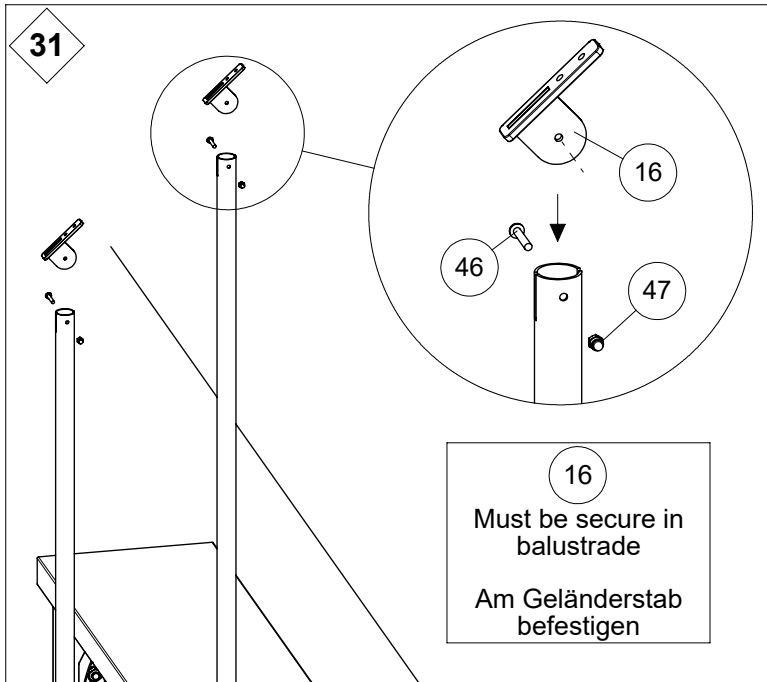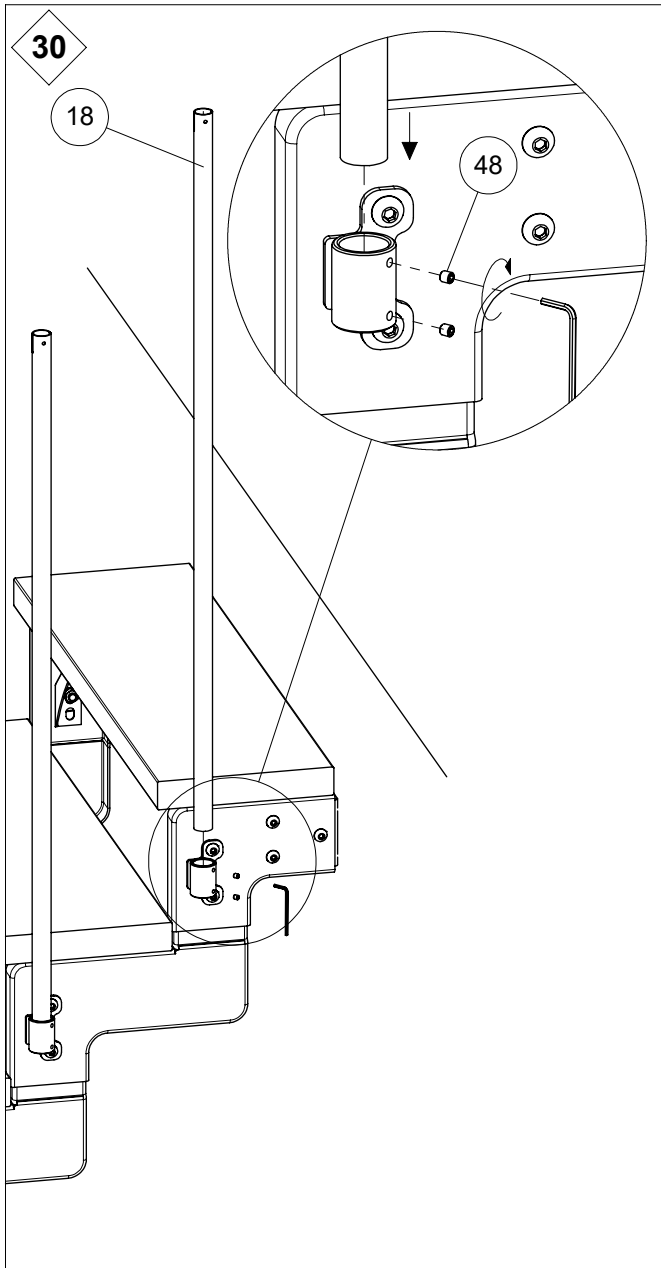

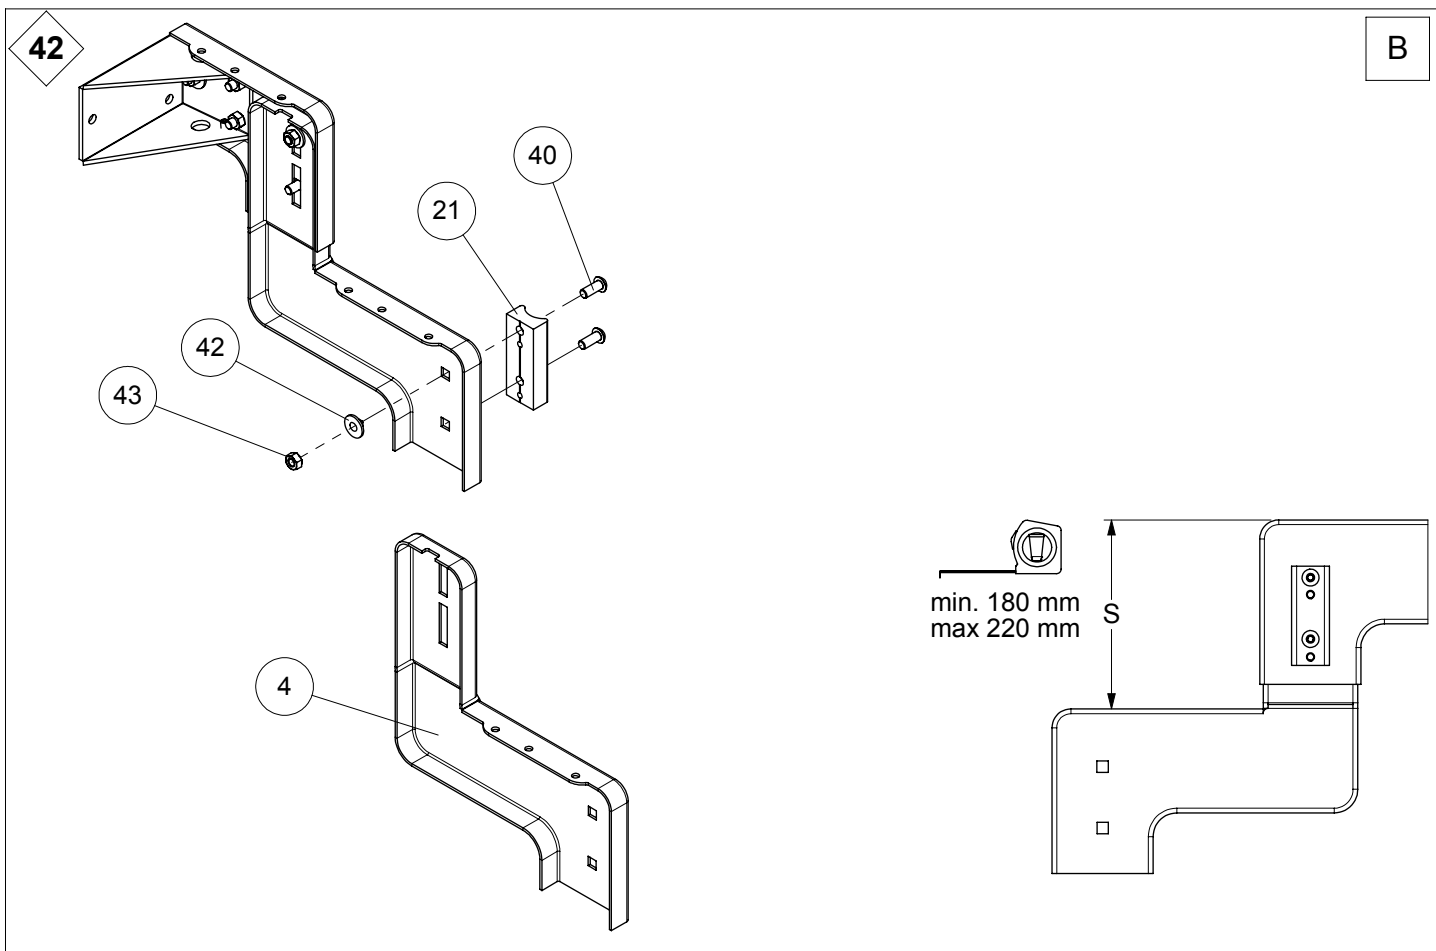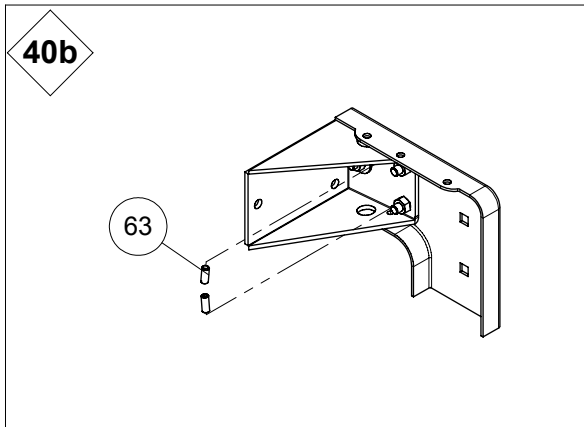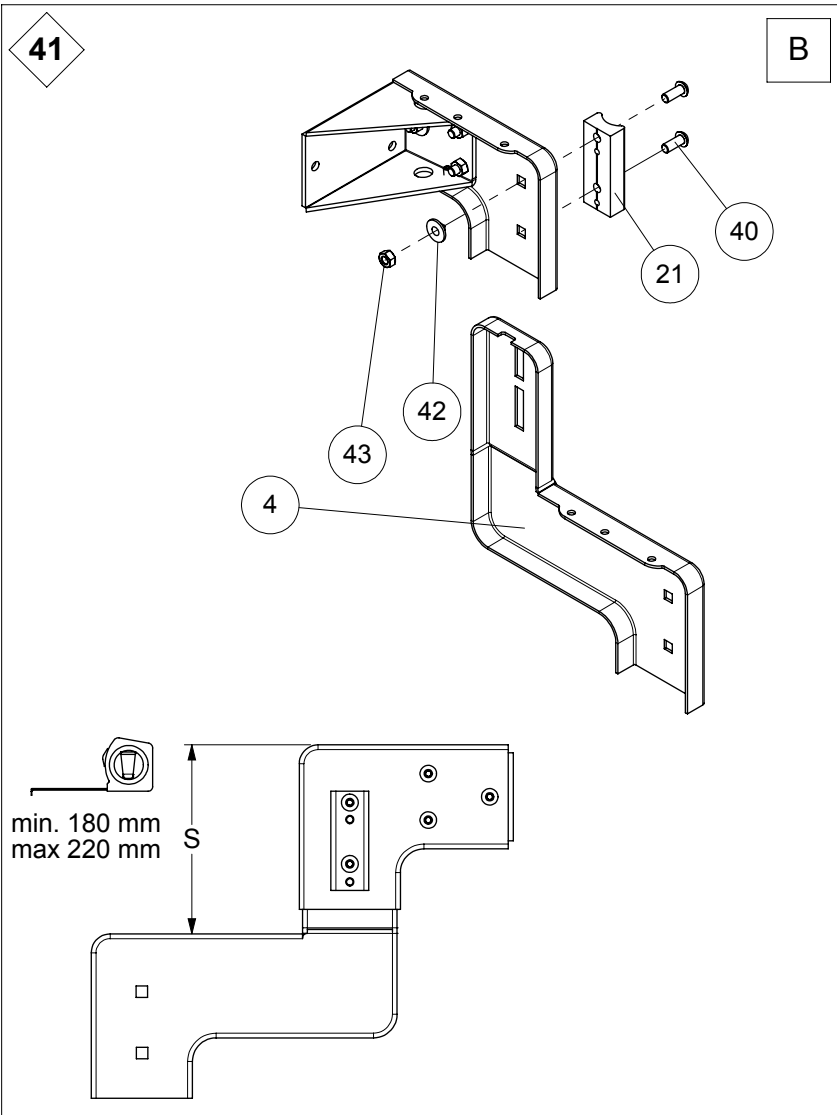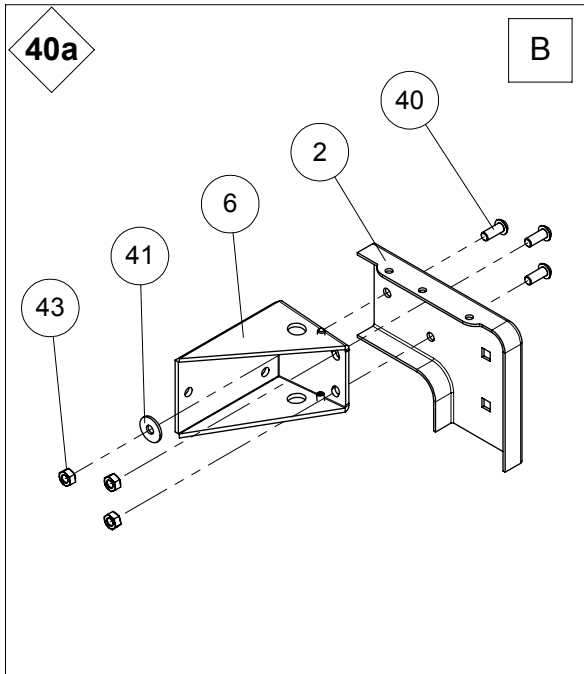


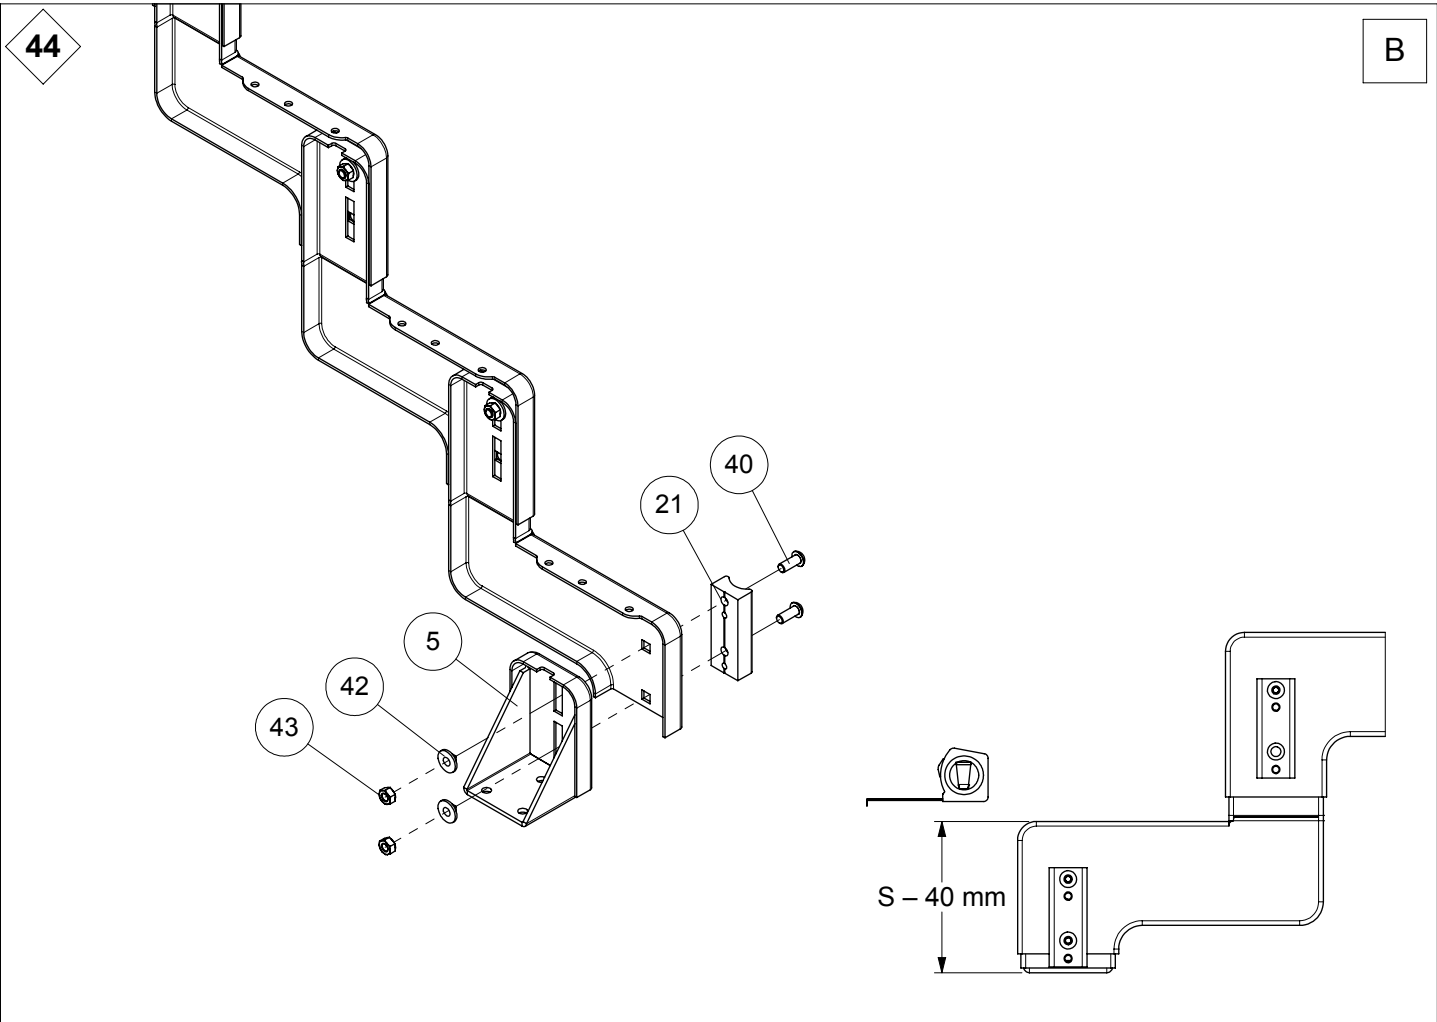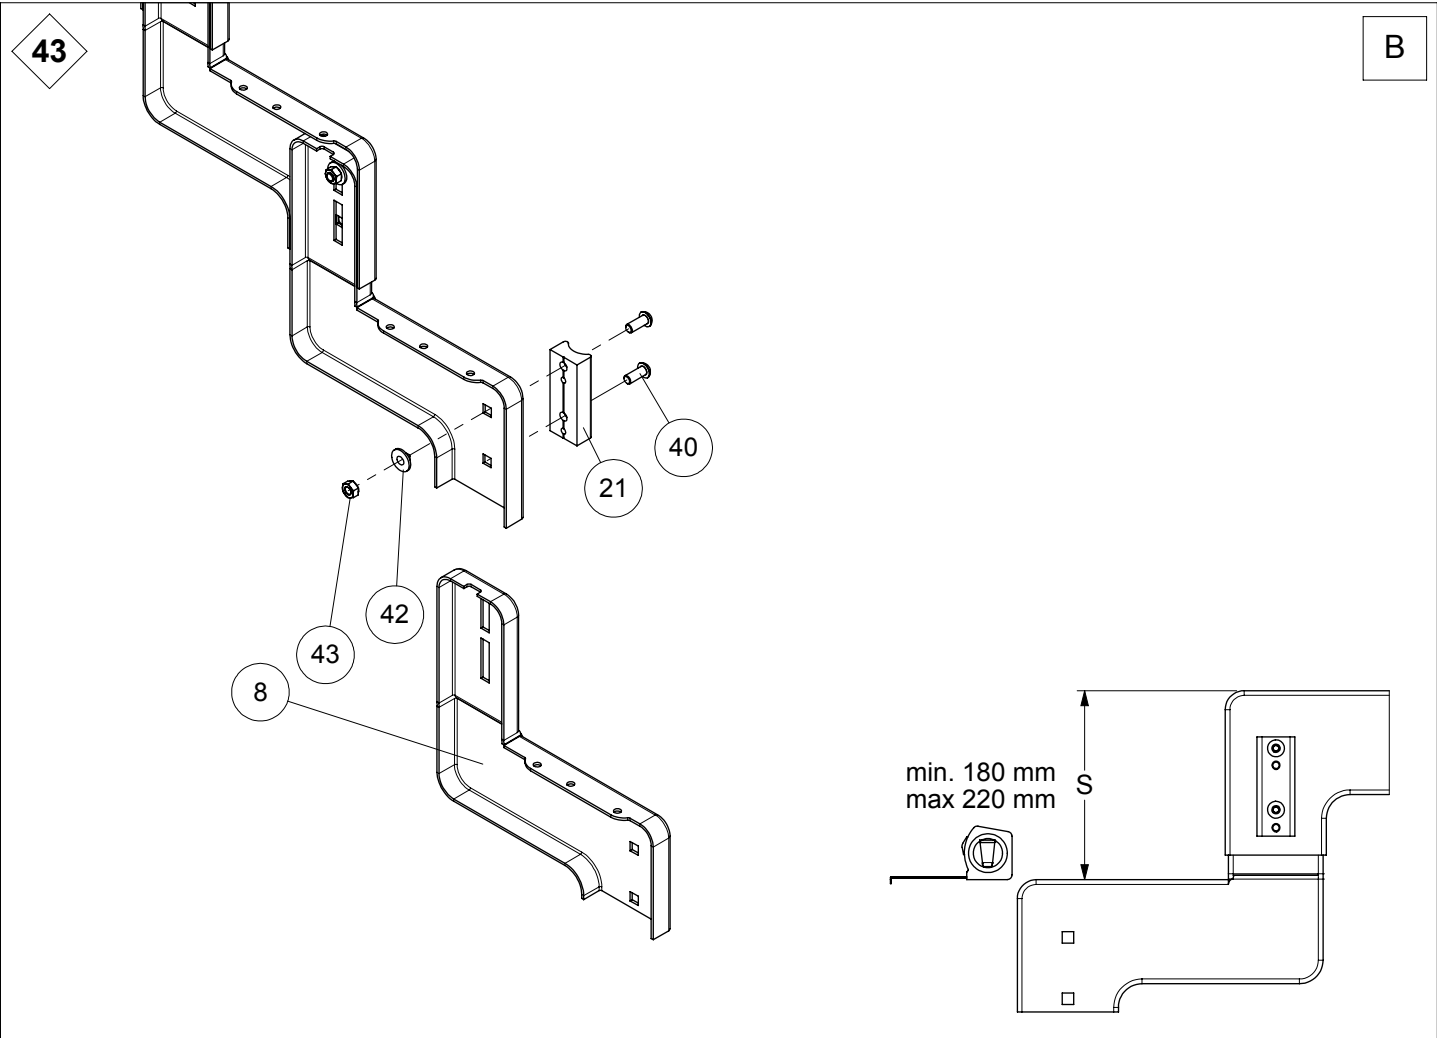

45


B

Stufe / Step	W
80 cm	803 mm
100 cm	1003 mm

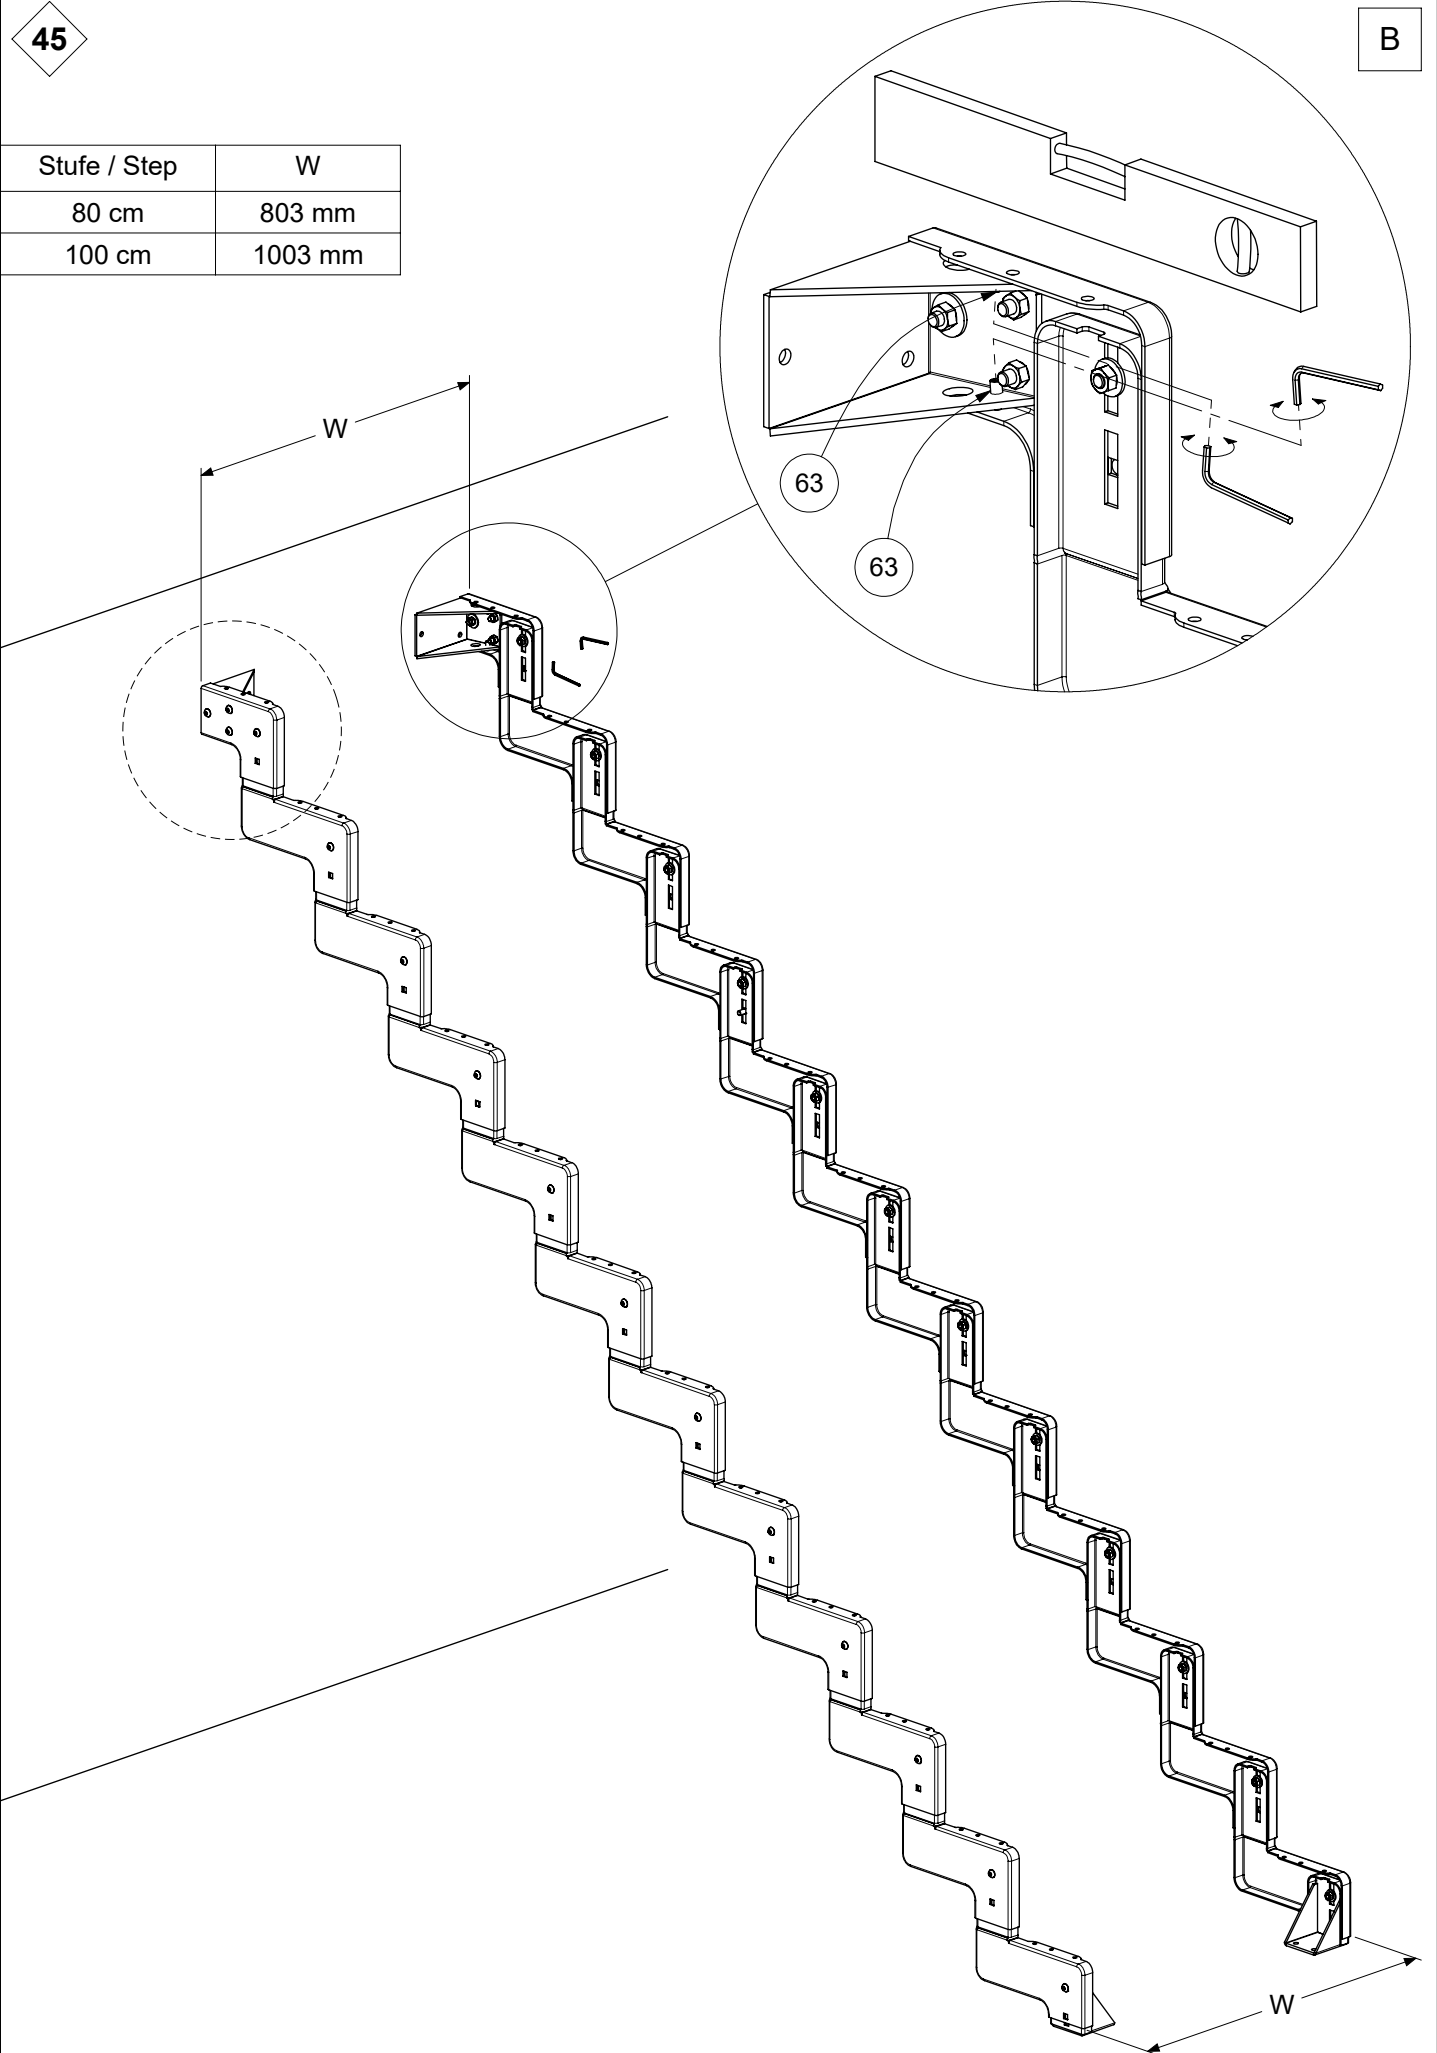


46


B

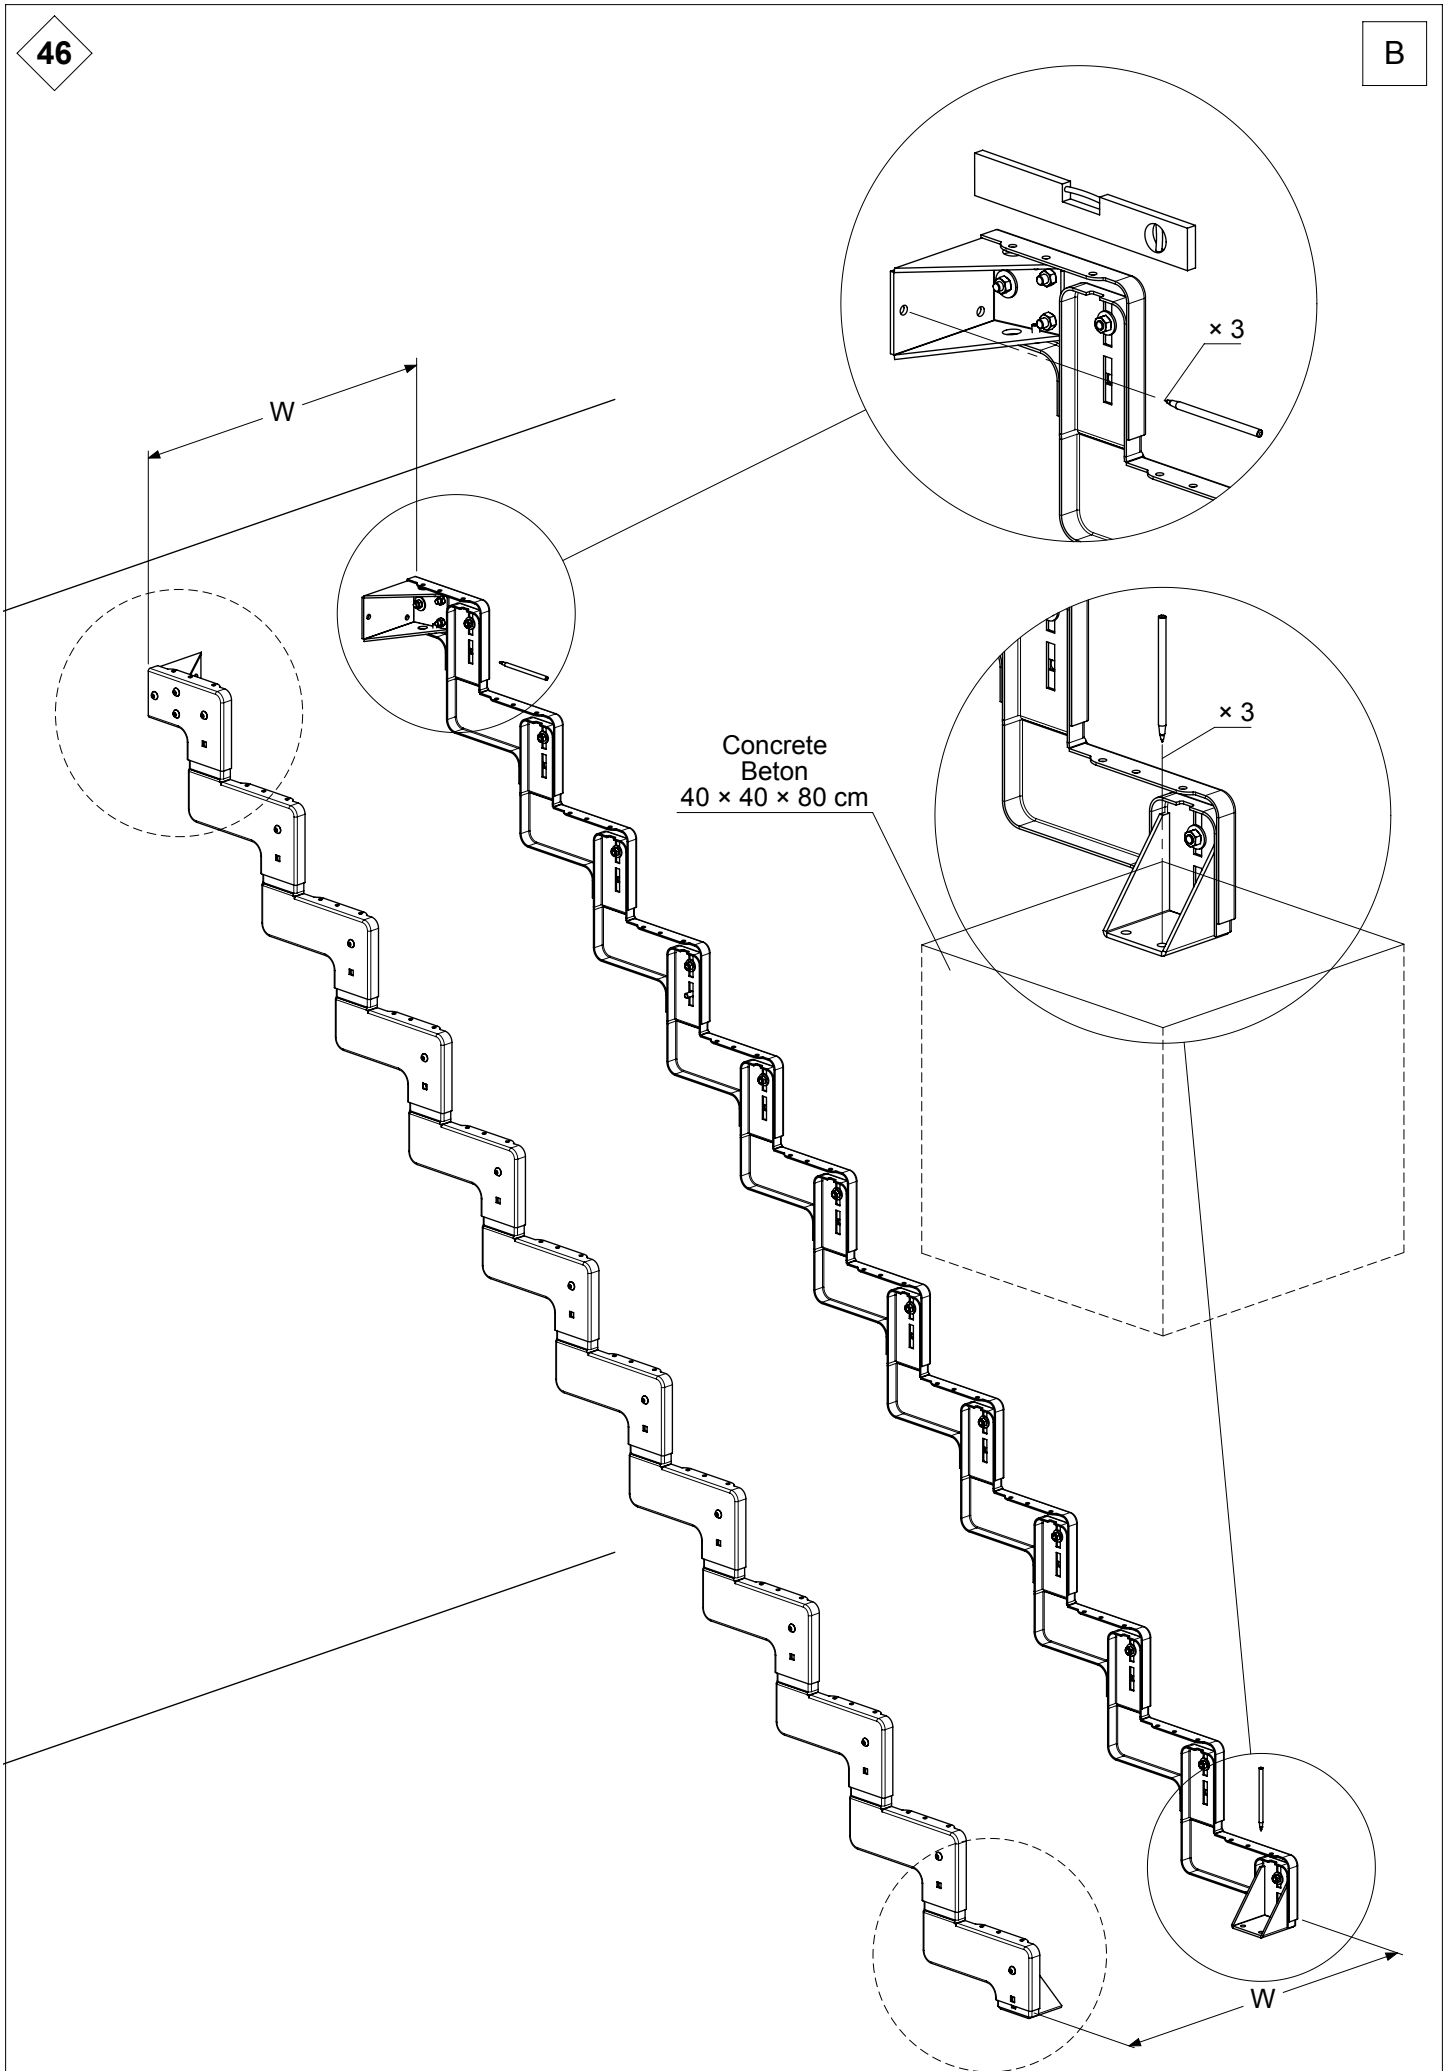


47

B

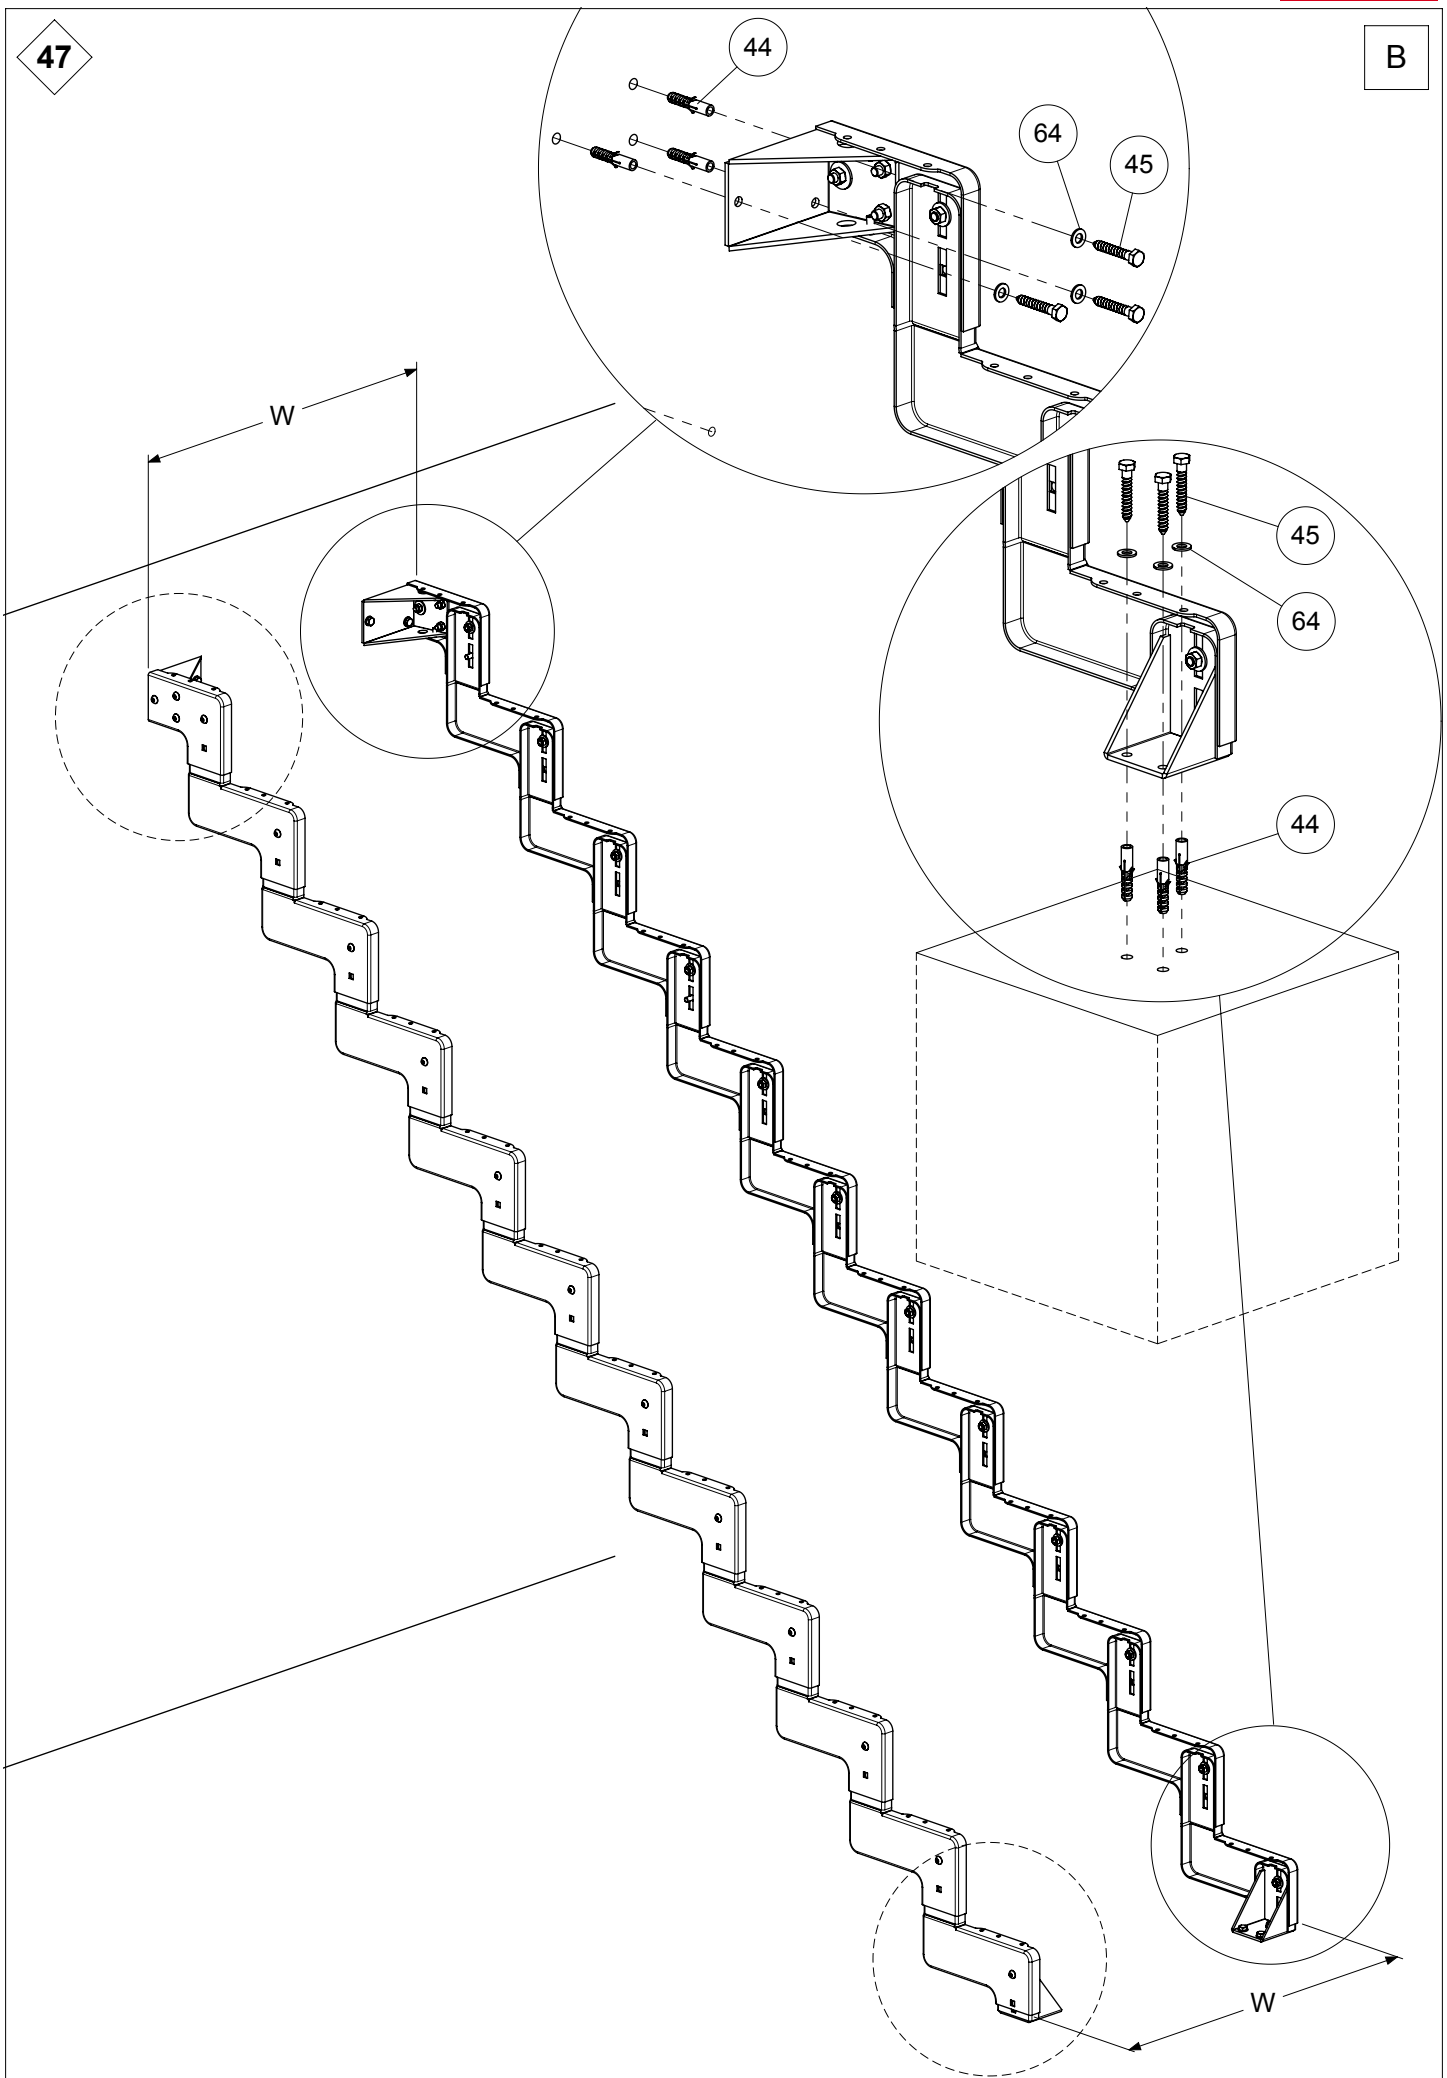

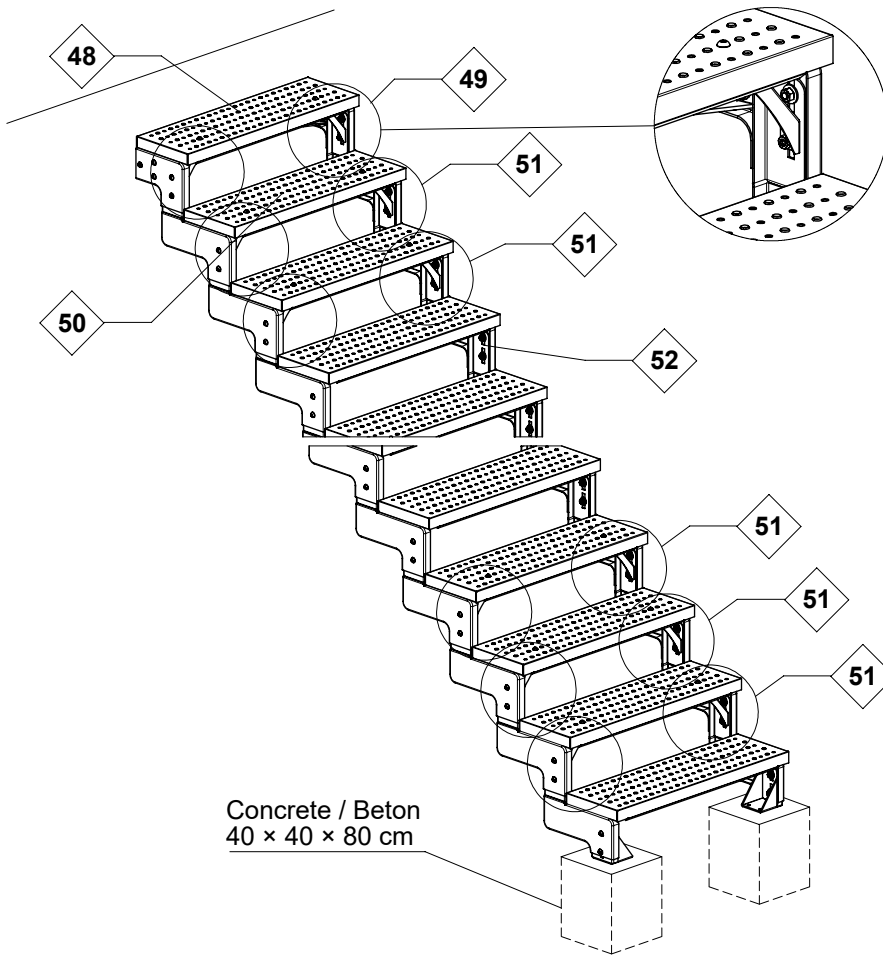

  
 If more than  
6 steps:  
Add  
 (10) + (9)  
 Wenn mehr als  
6 Stufen:  
 (10) + (9)  
hinzufügen

